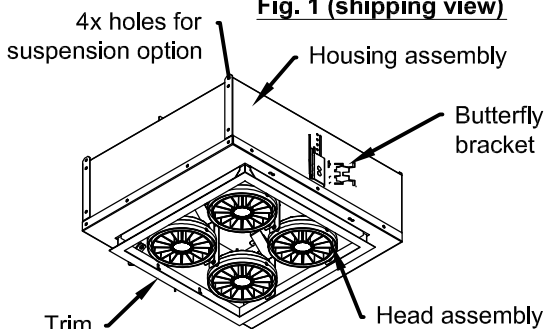
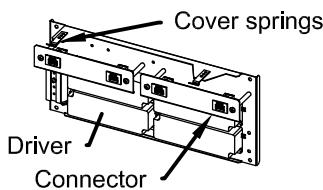
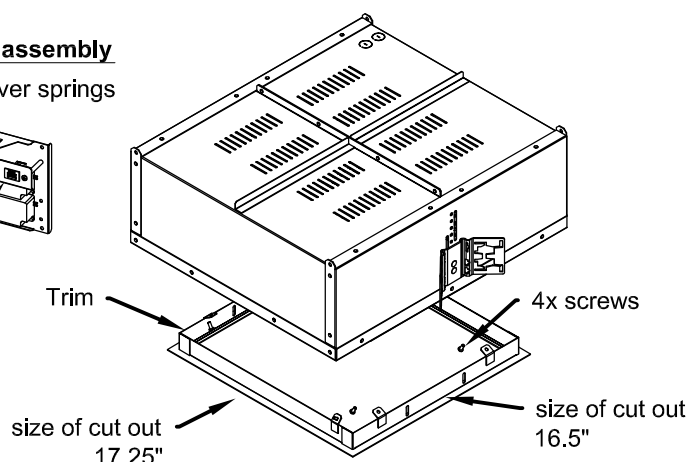
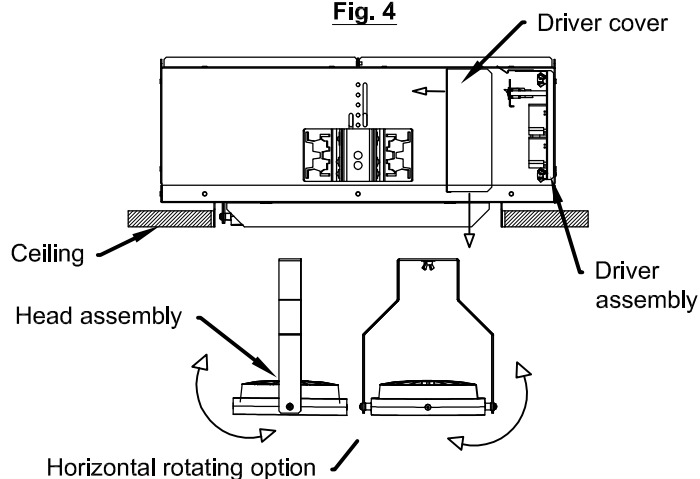
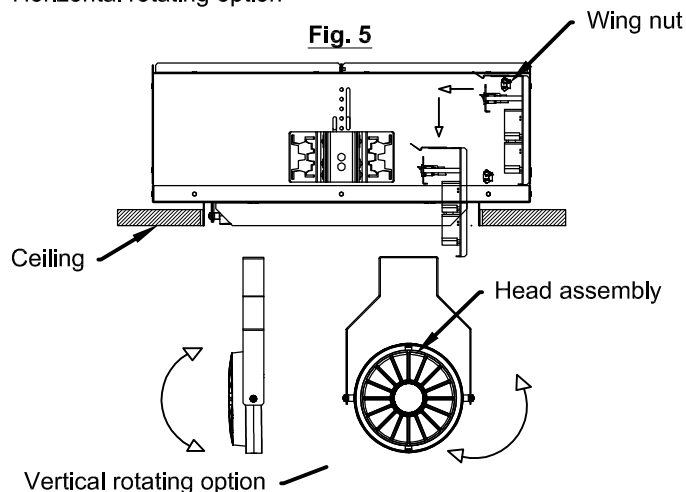
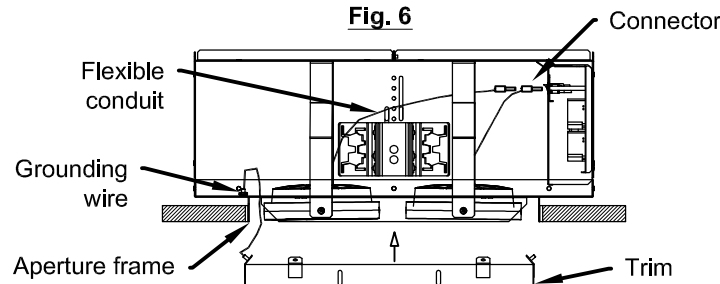


- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

Fig. 1 (shipping view)

Fig. 2 -Driver assembly

Fig. 3


INSTALLATION STEPS:

1. Remove the trim from the housing assembly by removing four screws. (Fig.3)
2. Create cut out in ceiling according to the size (16,5" x 17,25").(Fig.3)
3. Place the housing assembly (dimensions are 19,85" x 22,4" x 9,65") in ceiling opening.
4. Fixture must be supported by structure. Use butterfly brackets to secure the housing assembly (Fig.1) to structure. Brackets accept various types of bars (bars supplied by other) (Fig. 1). Before completing installation, be certain that the aperture frame of the housing assembly is flush with ceiling surface or 1/16" above. (Fig. 6)
DO NOT allow the aperture frame edge below ceiling surface.
5. Adjustable elevation of housing can accommodate 0.50" to 1.25" ceiling thickness.
6. Use holes in the top corners of the housing for additional fixture support. (Fig. 1)
7. Provide electrical service, according to the National Electrical Code or your local electrical code, from a suitable junction box to the driver assembly (Fig.2) located on the housing assembly follow steps below.
8. Turn head assembly 90° to vertical axis (Fig.5) and put out driver cover (Fig.4). For more maintenance access turn head support bracket 90° to horizontal axis by loosen wing nut (Fig.5) or remove head assembly from housing by removing wing nut.
9. Remove appropriate round knock-out(s) and connect conduit from J-box to power core in driver assembly with proper connector(s) (not included).
10. Re-install driver cover and secure it by two springs(Fig.2).
11. Re-install head assembly and connect flexible conduit from the head to the proper connector in the driver assembly.(Fig.6)
12. Place trim to the housing assembly, ground the trim assembly to the housing and secure by screws. (Fig.6)

Fig. 4

Fig. 5

Fig. 6


DRIVER MAINTENANCE:

1. Turn power off. Rotate head assembly 90° align vertical axis and disconnect flexible conduit from driver assembly.
2. Remove driver cover, unscrew the wing nut, remove the driver assembly from the housing assembly.
4. Perform maintenance.
5. Re-install the driver assembly, driver cover and connect flexible conduit.
6. Re-install the trim following steps above.