

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.





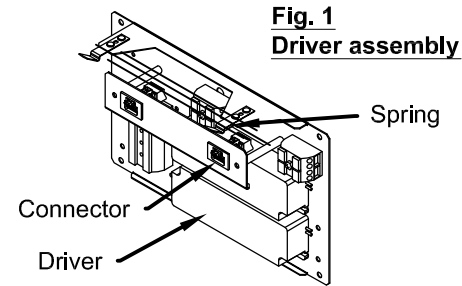


Table 1	X	Y
1 HEAD	8.2"	9.4"
2 HEAD	8.2"	17.4"
3 HEAD	8.2"	25.4"
4 HEAD	8.2"	33.4"
5 HEAD	8.2"	41.4"
6 HEAD	8.2"	49.4"

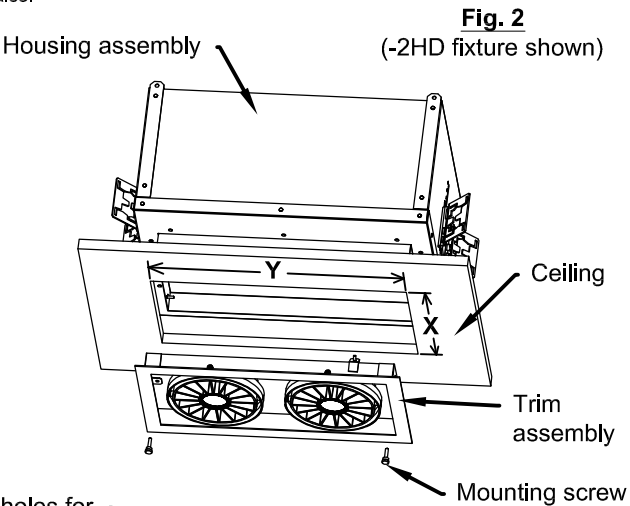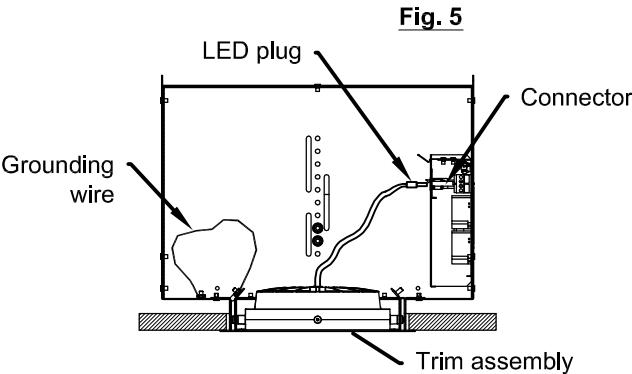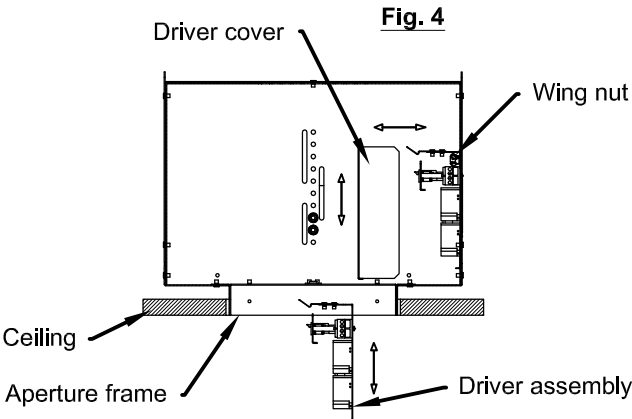

INSTALLATION STEPS:

1. Create cut out in ceiling according to Table 1. (Fig. 2).
2. Remove the trim assembly from the housing assembly by removing two mounting screws. (Fig. 2)
3. Place the housing assembly in ceiling opening.
4. Fixture must be supported by structure. Use butterfly brackets to secure the housing assembly to structure. Brackets accept various types of rails (rails are not supplied) (Fig. 3). Before completing installation, be certain that the aperture frame of the housing assembly is flush with ceiling surface or 1/16" above. (Fig. 4)
DO NOT allow the aperture frame edge below ceiling surface.
5. To adjust butterfly brackets position loosen nuts, adjust bracket height and retightens nuts or move bracket to other location, cutouts patterns on both sides of the housing assembly allow to choose suitable bracket position.
6. Use holes in the top corners of the housing for suspension option. (Fig. 3)
7. Provide electrical service, according to the National Electrical Code or your local electrical code, from a suitable junction box to the driver assembly located on the housing assembly according to steps below.
8. Disconnect LED plug from connector of the driver assembly (Fig1). Remove the driver cover of the springs from the driver assembly. The driver assembly will accept flexible metal conduit.
9. Remove appropriate round knock-out(s) (Fig.3) and connect flexible conduit to driver box with proper connector(s) (not included).
10. Connect excess wiring into the driver assembly and replace the driver cover.(Fig.4)
11. Lift the trim assembly into the housing assembly until trim flange is flush with ceiling and secure with two mounting screws. (Fig. 5)
12. Ground the trim assembly to the housing assembly. (Fig. 5)
13. Push in LED plug into connector in driver assembly. (Fig. 5)

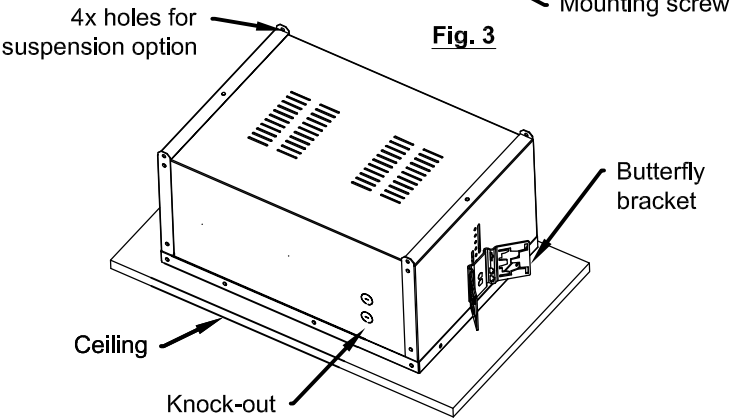

DRIVER MAINTENANCE:

1. Make sure power is off.
2. Release LED plugs, unscrew two mounting screws and carefully remove the trim assembly from ceiling.
3. Remove driver cover, unscrew the wing nuts, remove the driver assembly from the housing assembly. (Fig. 4)
4. Perform maintenance.
5. Re-install the driver assembly, driver cover and re-install the trim assembly following steps above.