
- SS1 SUSPENSION

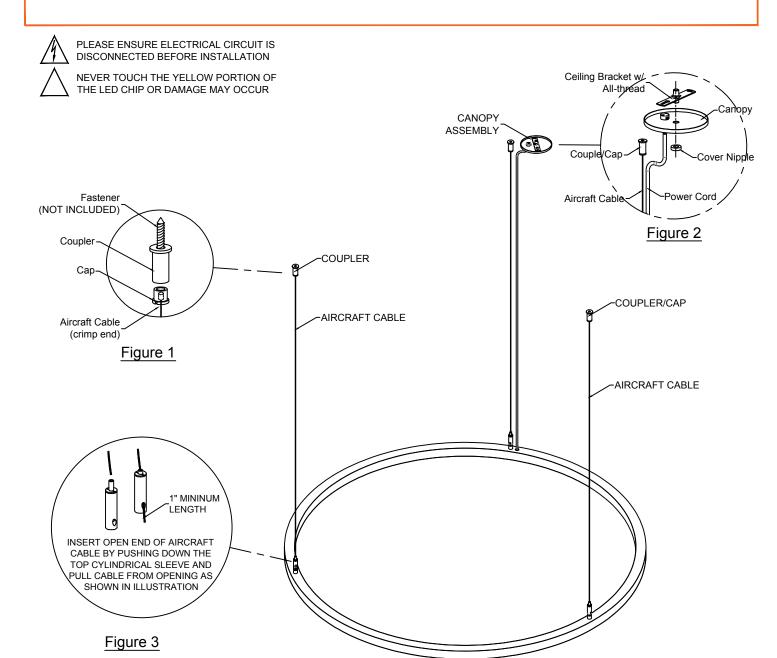

- 1. Mount the couplers to the ceiling using appropriate fasteners "NOT INCLUDED" according to the structure of the ceiling see Figure 1
- 2. Pass the aircraft cables through the caps
- 3. Fasten the cap to the couplers
- 4. Lift the fixture and attach the loose end of the aircraft cables to the cable gliders see Figure 3
- 5. Make all necessary wiring connections and attach the canopy to the junction box using the bracket/nipple/finial assembly provided
- 6. Level the fixture using the cable gliders to release the grip lock, press down on the tip of the mechanism (if desired, clip the excess aircraft cables after the fixture is level)


- SS2 SUSPENSION

 \triangle

LEASE ENSURE ELECTRICAL CIRCUIT IS DISCONNECTED BEFORE INSTALLATION




NEVER TOUCH THE YELLOW PORTION OF THE LED CHIP OR DAMAGE MAY OCCUR

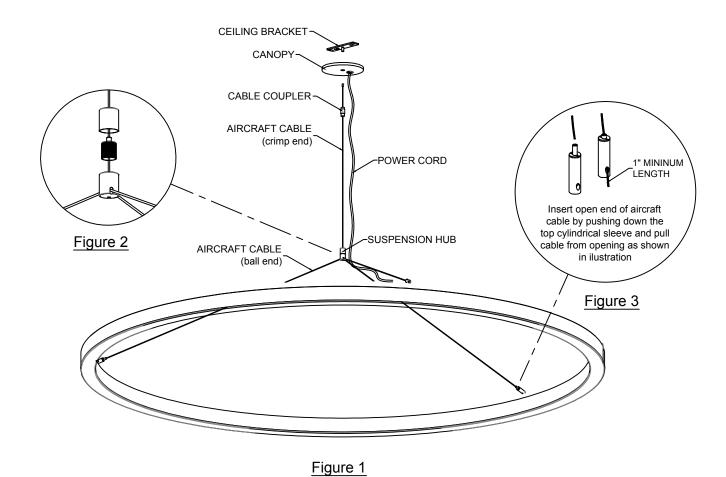

- 1. Place the fixture in the flat surface
- 2. Pass the aircraft cables with the crimp end through the cable coupler see Figure 1 $\,$
- 3. Unscrew and open the suspension hub, pass the aircraft cables (ball end) through the bottom piece of suspension hub see Figure 2
- 4. Attach the loose end of the aircraft cables (ball end) to the cable gliders see Figure 3
- 5. Pass the vertical aircraft cable's loose end through the top cap and the middle gripper piece of the suspension hub, the height of the fixture can be adjusted by pressing down on the tip of the gripper mechanism see Figure 2
- 6. Screw the suspension hub back together
- 7. Make all necessary wiring connections and attach the canopy to the junction box using the ceiling bracket see Figure 1
- 8. Fasten the cable coupler (with cable passing through it) using the 1/4-20 screw attached to the ceiling bracket

- SS3 SUSPENSION

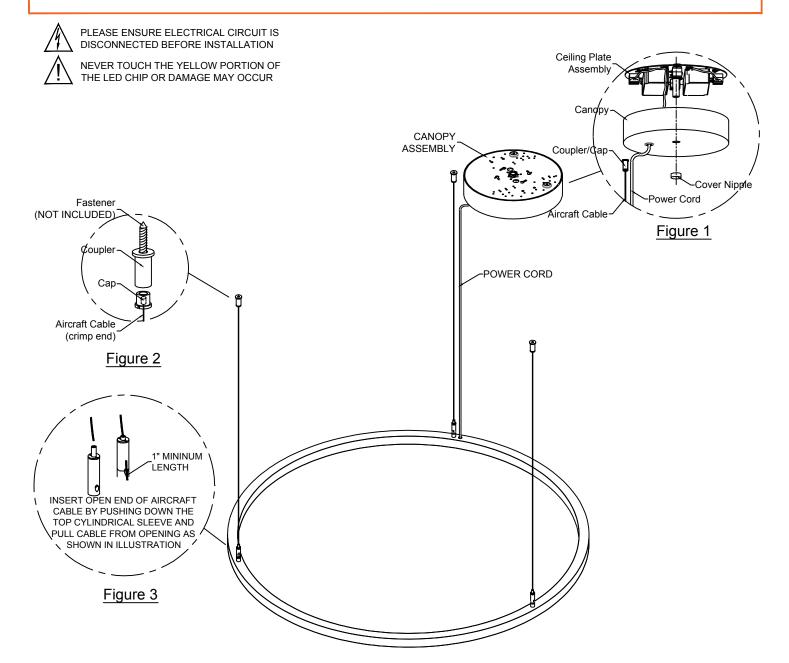

- 1. Mount the couplers to the ceiling using appropriate fasteners (NOT INCLUDED) according to the structure of the ceiling see Figure 2
- 2. Pass the aircraft cables through the caps
- 3. Fasten the caps to the couplers
- 4. Lift the fixture and attach the loose end of the aircraft cables to the cable gliders see Figure 3
- 5. Attach the ceiling plate to the ceiling using appropriate fasteners (NOT INCLUDED) to the ceiling plate's mounting holes- see Figure 1
- 6. Trim or coil the excess power cord inside the canopy
- 7. Make all the necessary wiring connections and attach the canopy to the junction box using the hex nut/nipple/finial provided
- 6. Level the fixture using the cable gliders to release the grip lock, press down on the tip of the mechanism (if desired, clip the excess aircraft cables after the fixture is level)


- SS4 SUSPENSION



PLEASE ENSURE ELECTRICAL CIRCUIT IS DISCONNECTED BEFORE INSTALLATION



NEVER TOUCH THE YELLOW PORTION OF THE LED CHIP OR DAMAGE MAY OCCUR

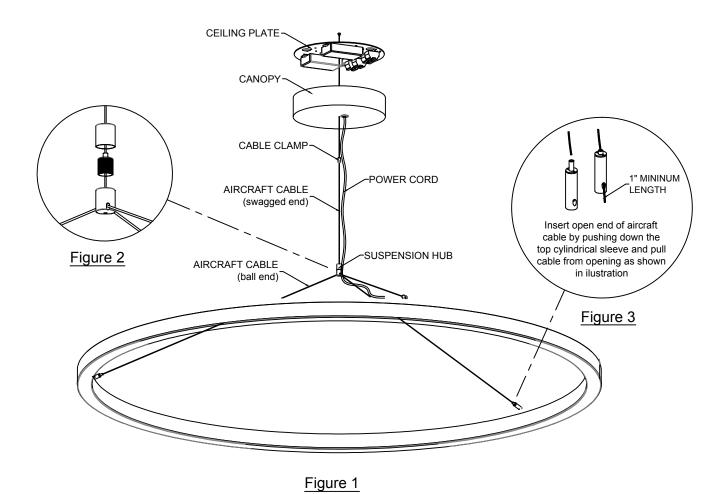

- 1. Place the fixture in the flat surface
- 2. Pass the aircraft cables (swagged end) through the center hole of the ceiling plate see Figure 1
- 3. Attach the ceiling plate to junction box and make an appropriate wiring connections to terminal blocks
- 4. Secure the ceiling plate to the ceiling using appropriate fasteners (NOT INCLUDED) to the ceiling plate mounting holes
- 5. Unscrew and open the suspension hub, pass the aircraft cables (ball end) through the bottom piece of suspension hub see Figure 2
- 6. Attach the loose end of the aircraft cables (ball end) to the cable gliders see Figure 3
- Pass the vertical aircraft cable's loose end through the top cap and the middle gripper piece of the suspension hub, adjust the height of the fixture by pressing down on the tip of gripper mechanism - see Figure 2
- 8. Screw the suspension hub back together
- 9. Trim or coil the excess power cord inside the canopy
- 10. Make all necessary electrical connections, lift the canopyinto position and secure it with cable clamp and set screw see Figure 1

INSTALLATION - PENDANT

DRIVER REMOTE

SCREW (x2)

BOX COVER

- DRIVER REMOTE BOX for SS1/SS3/SS6 SUSPENSION




PLEASE ENSURE ELECTRICAL CIRCUIT IS DISCONNECTED BEFORE INSTALLATION

NEVER TOUCH THE YELLOW PORTION OF THE LED CHIP OR DAMAGE MAY OCCUR

- 1. Remove the 2x 8-32 screws and the drivers' box cover
- 2. Remove the necessary knockouts
- 3. Attach the conduits "NOT SUPPLIED"
- 4. Make the wiring connections
- 5. Re-attach the cover and secure it with the supplied screws

NOTE:


Use the mounting brackets to secure the box in place to the structure of the ceiling (MOUNTING SCREWS BY OTHERS)

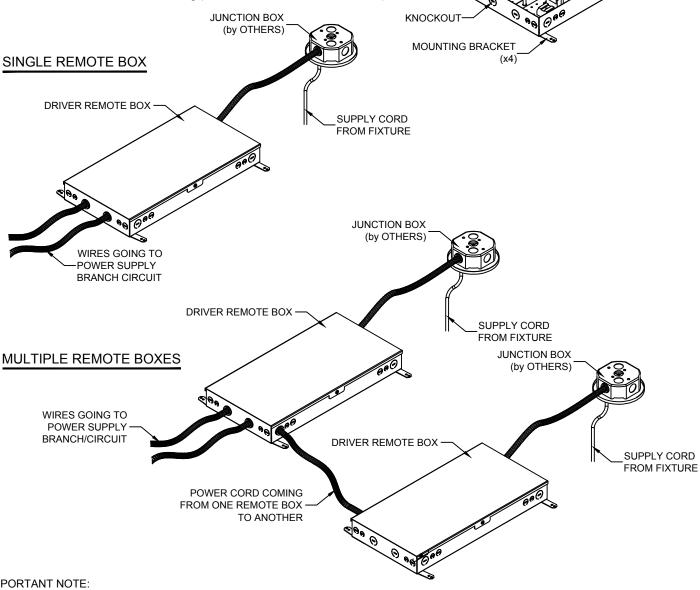

IMPORTANT NOTE:

- 1. When more than one remote box is supplied, they all must be connected to the same power supply branch circuit
- 2. Remote boxes should be accessible after installatio

- ACOUSTIC PANEL

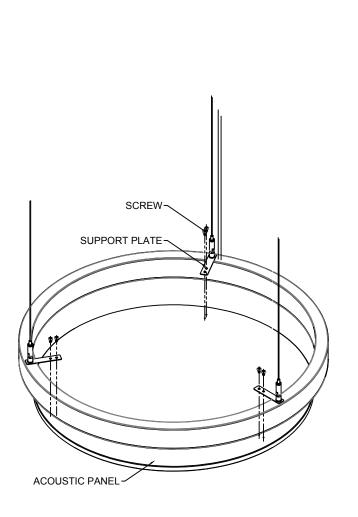

SCREW SUPPORT PLATE

ACOUSTIC PANEL

Figure 2

Figure 1

- 1. Insert the acoustic panel into the frame see Figure 3
- 2. Align the marking holes of acoustic panel to the holes of support plate
- 3. Secure it with the supply screw


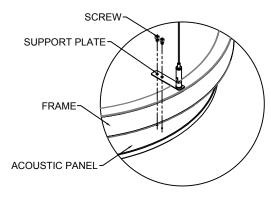


Figure 3

- Suspension Mounting Points

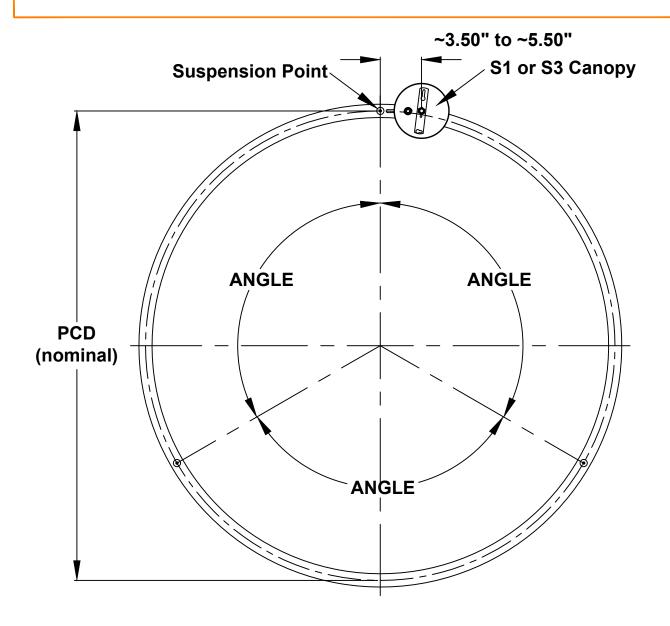

| Code | | Diameter | PCD | | Number of | Angle |
|--|--|--|--|--|-----------------------|--|
| Direct | Indirect | Diameter | Direct | Indirect | Suspension Points | Angle |
| MRRP1P02 MRRP1P03 MRRP1P04 MRRP1P05 MRRP1P06 MRRP1P07 | 954126 954136 954148 954160 954172 954184 | 24 in 36 in 48 in 60 in 72 in 84 in | 23.38" 35.00" 47.00" 58.75" 70.75" 82.75" | 23.62" 35.00" 47.00" 59.00" 71.00" 83.00" | 3 3 3 6 6 | 120° 120° 120° 120° 60° 60° |