

1 IMPORTANT NOTE

Fixture comes partially assembled.

⚠ Ensure electrical circuit is disconnected before installation.

⚡ Luminaires must be installed in accordance with National electrical code and local regulation.

2 POS HUB, INTEGRAL DRIVER (SS9) INSTALLATION

STEP 1

Refer to the "Hub Integral POS Canopy and Suspension" installation instruction sheet.

STEP 2

Mount the canopy on to the junction box and ceiling using appropriate fasteners (not included) according to the structure (FIG 2)

STEP 3

If not attached, lift the fixture and attach the loose ends of the suspension cables to the cable gliders.

STEP 4

Adjust mounting height "H" (FIG 1) following the guidelines in Table 1.

STEP 5

Level the fixture using the cable gliders. To release the grip lock, press down on the tip of the mechanism.

STEP 6

Make appropriate wiring connections and attach the canopy cover using magnets inside the canopy.

SIZE	MIN HEIGHT (H)	MAX HEIGHT (H)
3ft	24" [610mm]	78" [1981mm]
4ft	24" [610mm]"	78" [1981mm]
5ft	36" [914mm]"	78" [1981mm]
6ft	36" [914mm]"	78" [1981mm]
7ft	42" [1067mm]"	78" [1981mm]

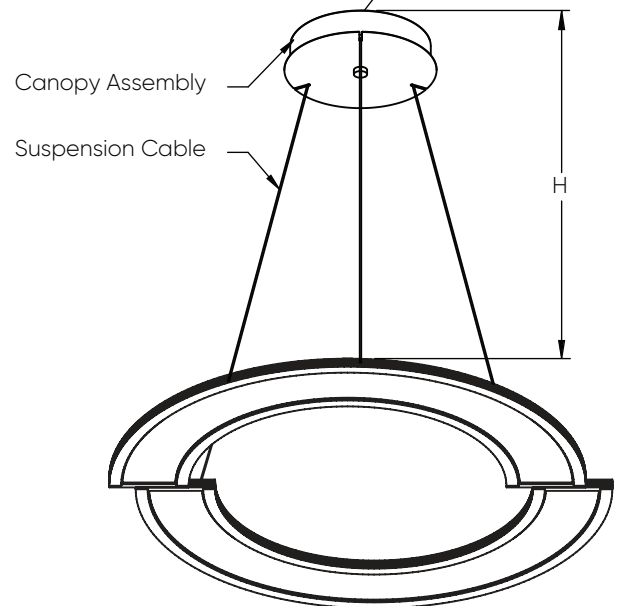
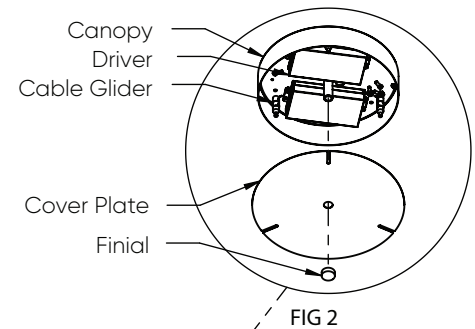


FIG 1

3 HUB REMOTE POS (SS7) INSTALLATION

STEP 1

Refer to the "Hub Remote POS Canopy and Suspension" installation instruction sheet.

STEP 2

Mount the canopy on to the junction box and ceiling using appropriate fasteners (not included) according to the structure (FIG 1)

STEP 3

If not attached, lift the fixture and attach the loose ends of the suspension cables to the cable gliders.

STEP 4

Adjust mounting height "H" (FIG 2) following the guidelines in Table 1.


STEP 5

Level the fixture using the cable gliders. To release the grip lock, press down on the tip of the mechanism.

STEP 6

Make appropriate wiring connections and attach the canopy cover using the magnets inside the canopy.

SIZE	MIN HEIGHT (H)	MAX HEIGHT (H)
3ft	24" [610mm]	78" [1981mm]
4ft	24" [610mm]"	78" [1981mm]
5ft	36" [914mm]"	78" [1981mm]
6ft	36" [914mm]"	78" [1981mm]
7ft	42" [1067mm]"	78" [1981mm]

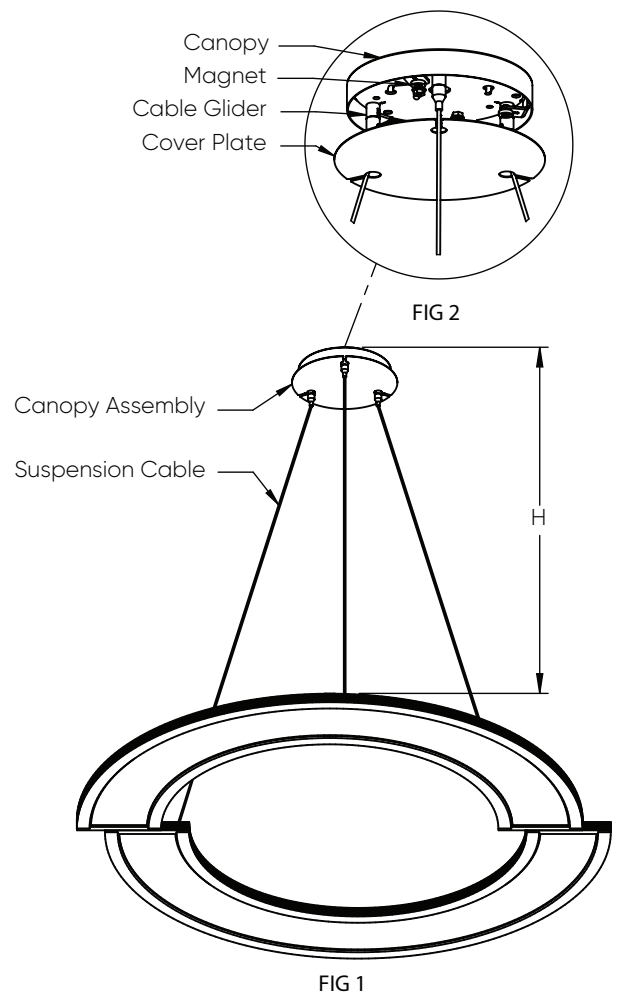

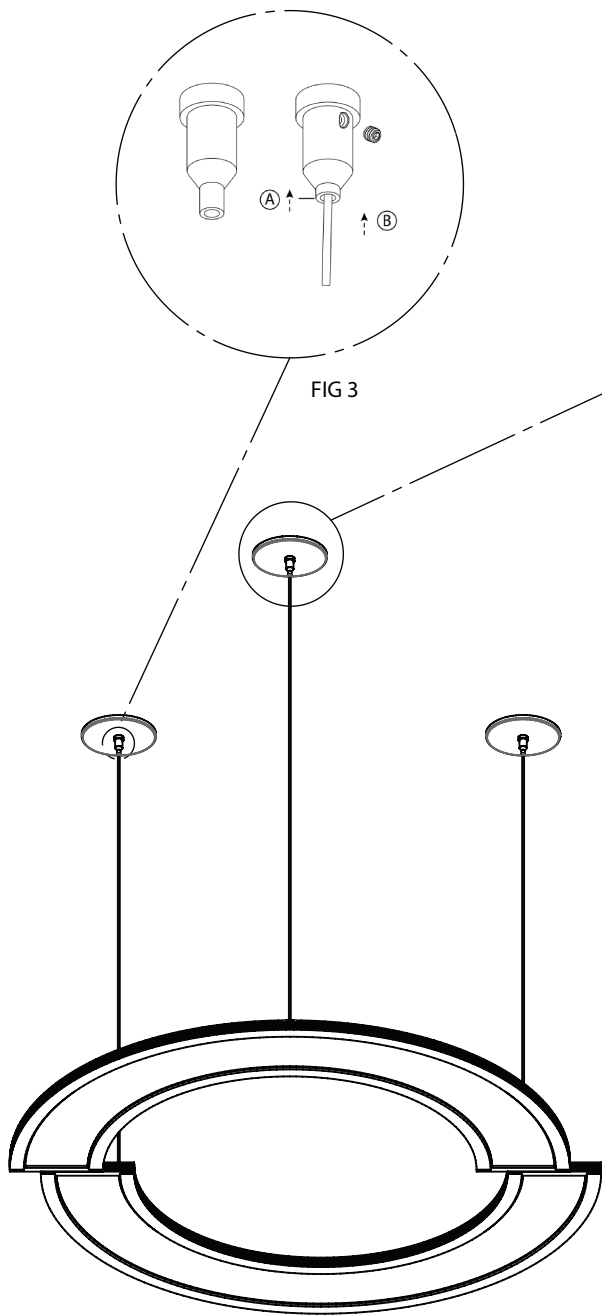


FIG 3

FIG 2

FIG 1

Maximum remote mounting distance from canopy to drivers:

18 AWG = 9.5' [3m]
16 AWG = 19.5' [6m]
14 AWG = 29.5' [9m]

STEP 1

Make appropriate wiring connections and mount the canopies and couplers to the ceiling using appropriate fasteners (not included) according to the structure of the ceiling (FIG 2).

STEP 2

Level the fixture using the gliders on the ceiling canopy (FIG 3). To release the grip lock, press down the top of the mechanism.

STEP 3

Lock the position with the set screw after adjustments (FIG 3).

5 REMOTE BOX

STEP 1

Remove the 2x 8-32 screws and the drivers' box cover.

STEP 2

Remove the necessary knockouts.

STEP 3

Attach the conduits "NOT SUPPLIED".

STEP 4


Make the wiring connections.

STEP 5


Re-attach the cover and secure it with the supplied screws

NOTE:


Use the mounting brackets to secure the box in place

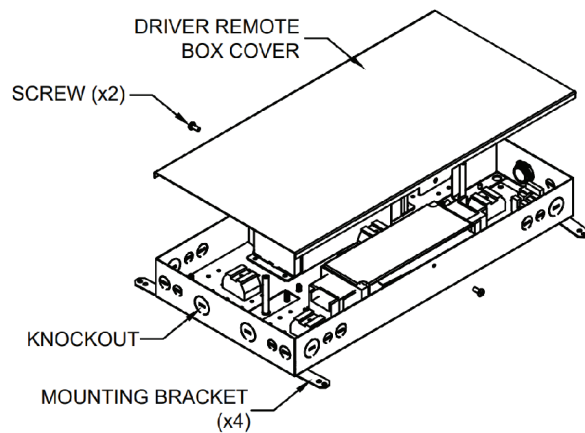

6 SINGLE CANOPY / SINGLE REMOTE BOX

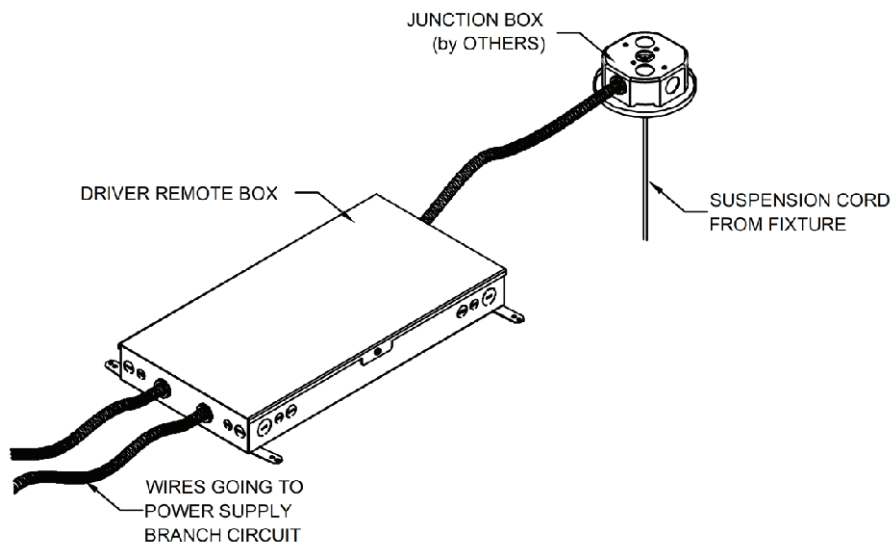

7 SINGLE CANOPY / MULTIPLE REMOTE BOX

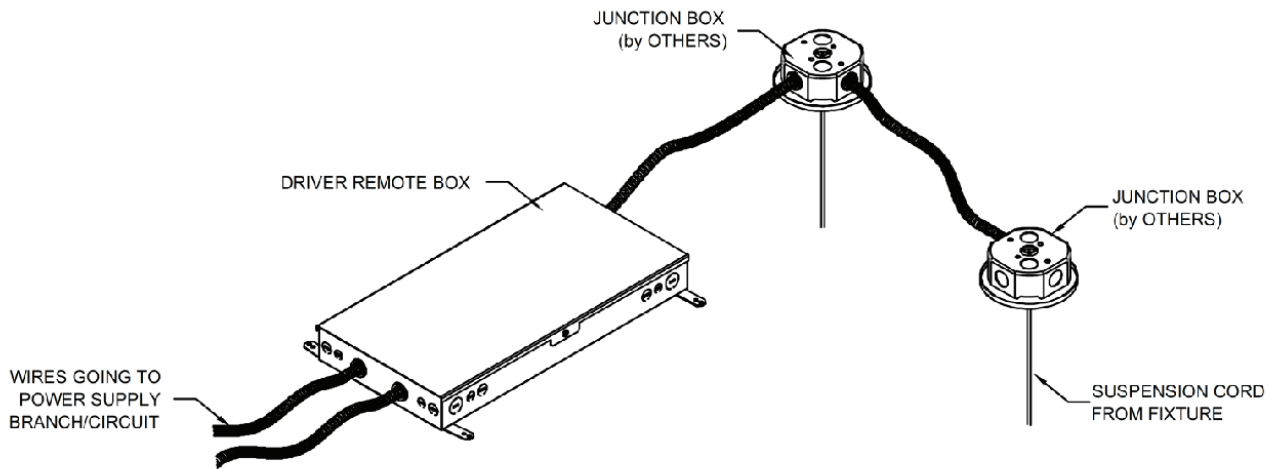

8 MULTIPLE CANOPIES / MULTIPLE REMOTE BOX

