

FIXTURE COMES PARTIALLY ASSEMBLED.




Ensure electrical circuit is disconnected before installation.



Luminaires must be installed in accordance with national electrical code and local regulation.

1. Pull the flexible flap on the end of the flexible joiner, then pull down the lens. Pull down the LED gear tray on the side that requires servicing. (see Fig. 1).

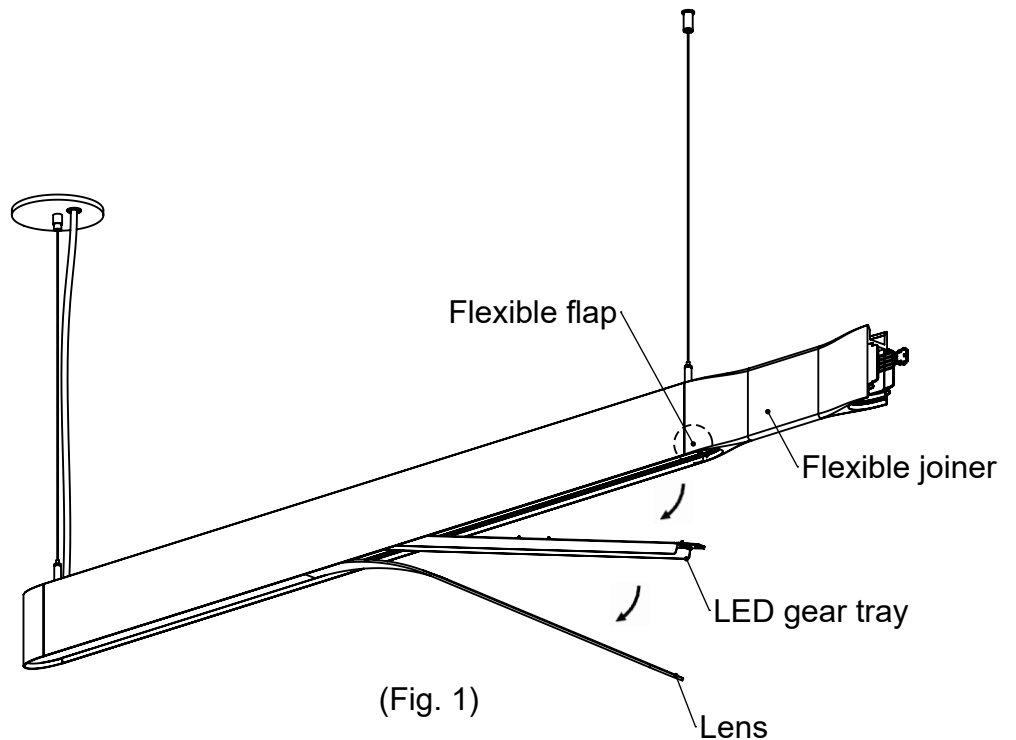

FIXTURE COMES PARTIALLY ASSEMBLED.




Ensure electrical circuit is disconnected before installation.



Luminaires must be installed in accordance with national electrical code and local regulation.

2. To service the LEDs or the drivers, disconnect the wires from the LED to the driver. Remove the LED gear tray assembly (see Fig. 2).

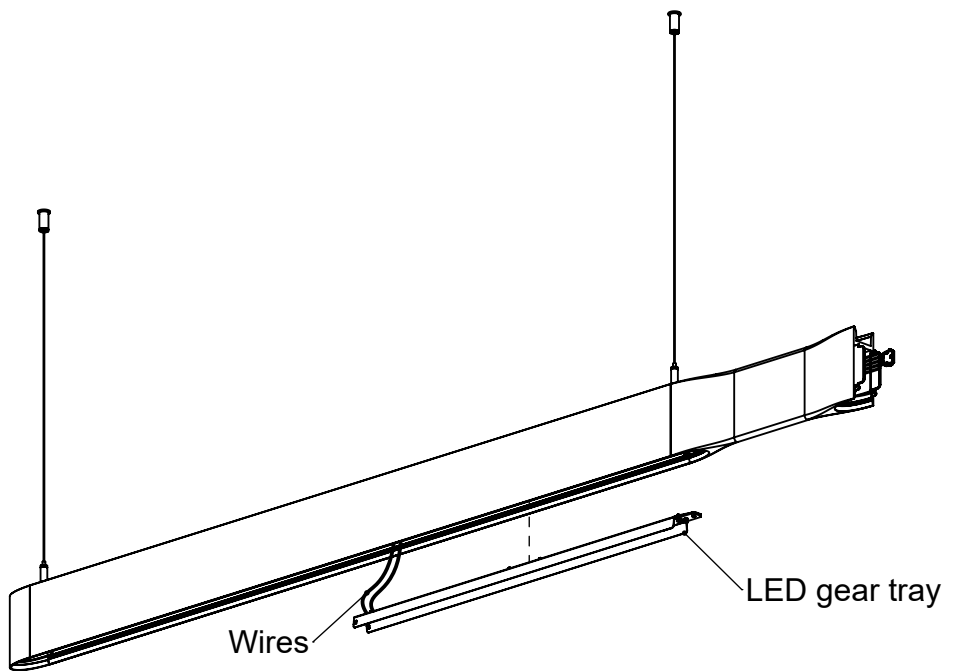

(Fig. 2)

FIXTURE COMES PARTIALLY ASSEMBLED.




Ensure electrical circuit is disconnected before installation.



Luminaires must be installed in accordance with national electrical code and local regulation.

3. Remove 2 screws per driver in order to remove the driver assembly (see Fig. 3).

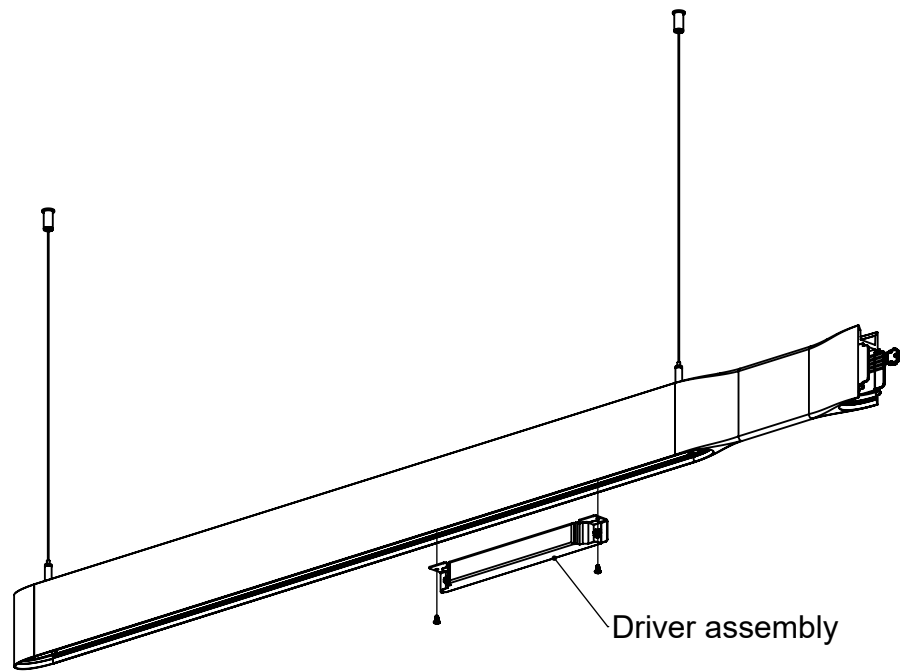

(Fig. 3)

FIXTURE COMES PARTIALLY ASSEMBLED.




Ensure electrical circuit is disconnected before installation.




Luminaires must be installed in accordance with national electrical code and local regulation.

4. If the flexible joiner needs to be removed, disconnect the electrical connector(s) (see Fig. 4).

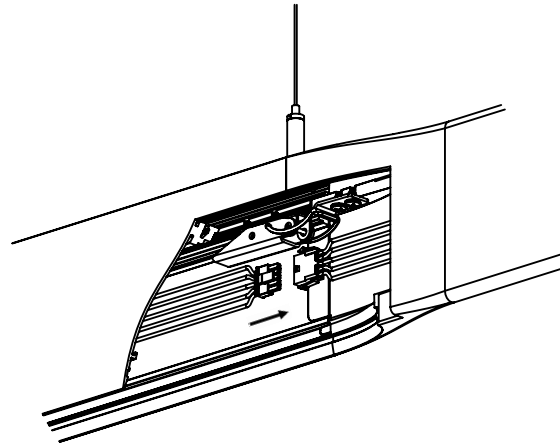

(Fig. 4)

5: Pull down the latch mechanism in order to release it from the hook on the flexible joiner (see Fig. 5).

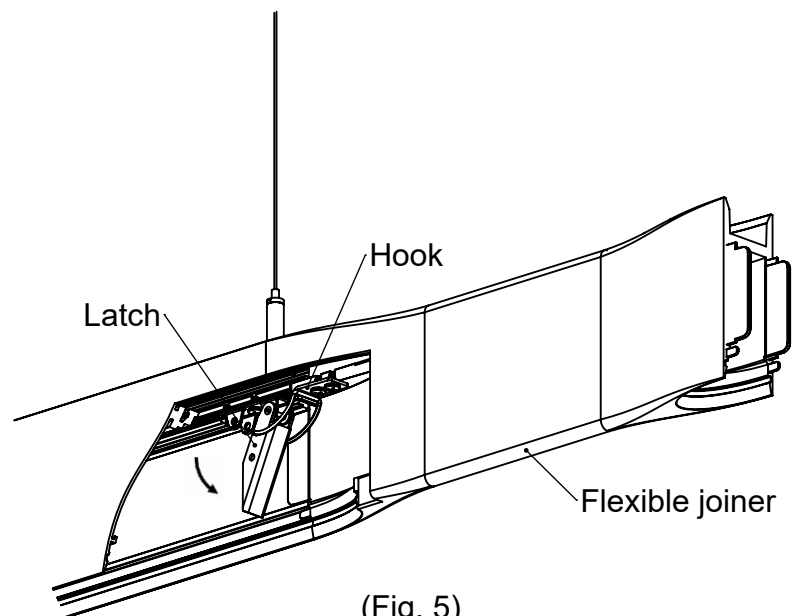

(Fig. 5)

FIXTURE COMES PARTIALLY ASSEMBLED.




Ensure electrical circuit is disconnected before installation.



Luminaires must be installed in accordance with national electrical code and local regulation.

6. Disconnect the flexible joiner from the frame in order to service it (see Fig. 6).

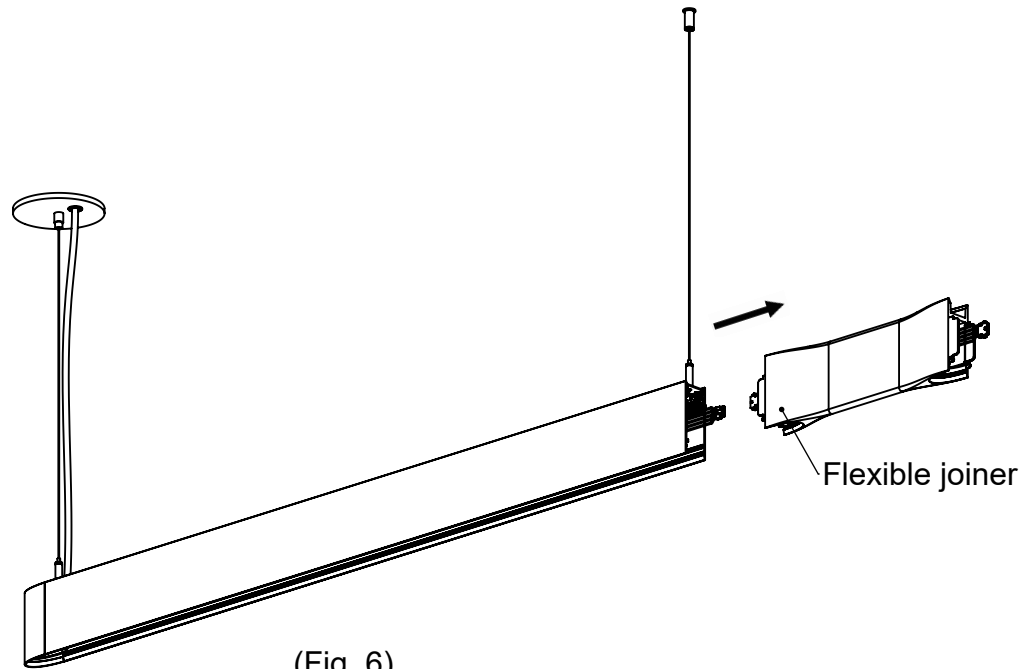

To assemble all parts back together, review the installation instructions document.