




WEB PIN™ CODES: 200/244

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

INSTALLATION INSTRUCTIONS FOR TYPE "S1" MOUNTING

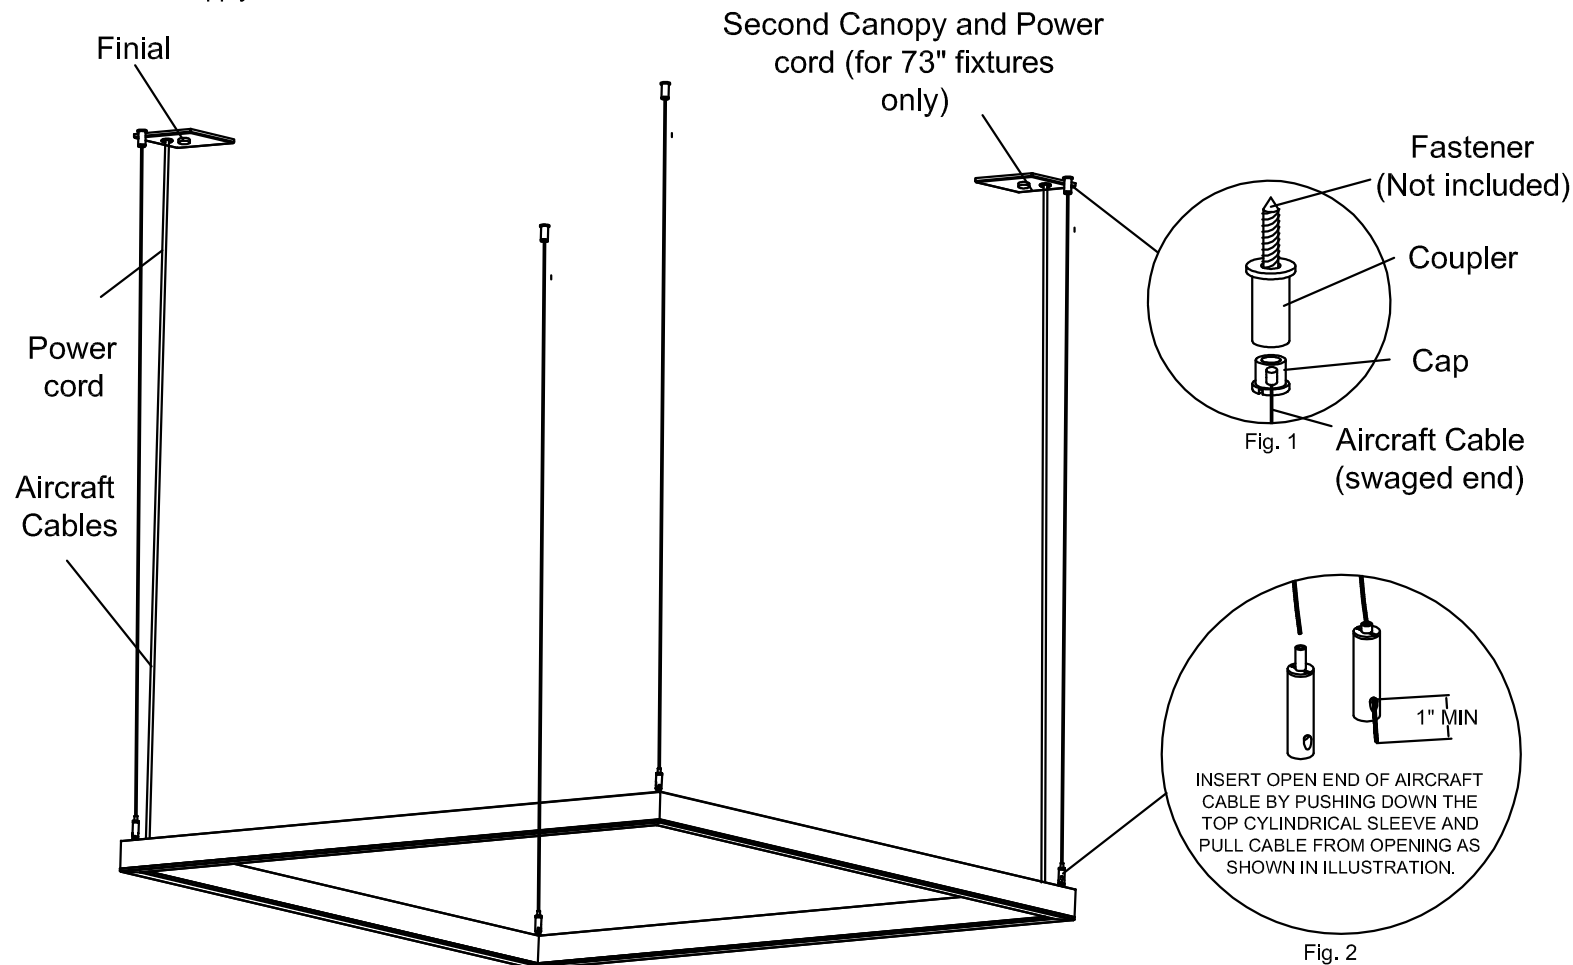

1. Mount the couplers to the ceiling using appropriate fasteners -NOT INCLUDED- according to the structure of the ceiling - see Fig.1
2. Pass the aircraft cables through the caps - see Fig.1
3. Fasten the caps to the couplers
4. Lift the fixture and attach the loose ends of the Aircraft Cables to the cable gliders -see Fig.2
5. Make all necessary wiring connections and attach the canopy to the junction box using the bracket/nipple/finial assembly provided.
6. Level the fixture using the cable gliders. To release the grip lock, press down on the tip of the mechanism. If desired, clip the excess aircraft cables after the fixture is level.

Note: The canopy is used to cover the branch circuit/junction box.

**IMPORTANT NOTE FOR
FIXTURES WITH LED:
- DO NOT TOUCH THE
LED.**

**NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES
WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS**



FIXTURE DESCRIPTION: MICRO SQ DE/MICRO SQ II PENDANT



WEB PIN™ CODES: 200/244

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

INSTALLATION INSTRUCTIONS FOR TYPE "S1" MOUNTING

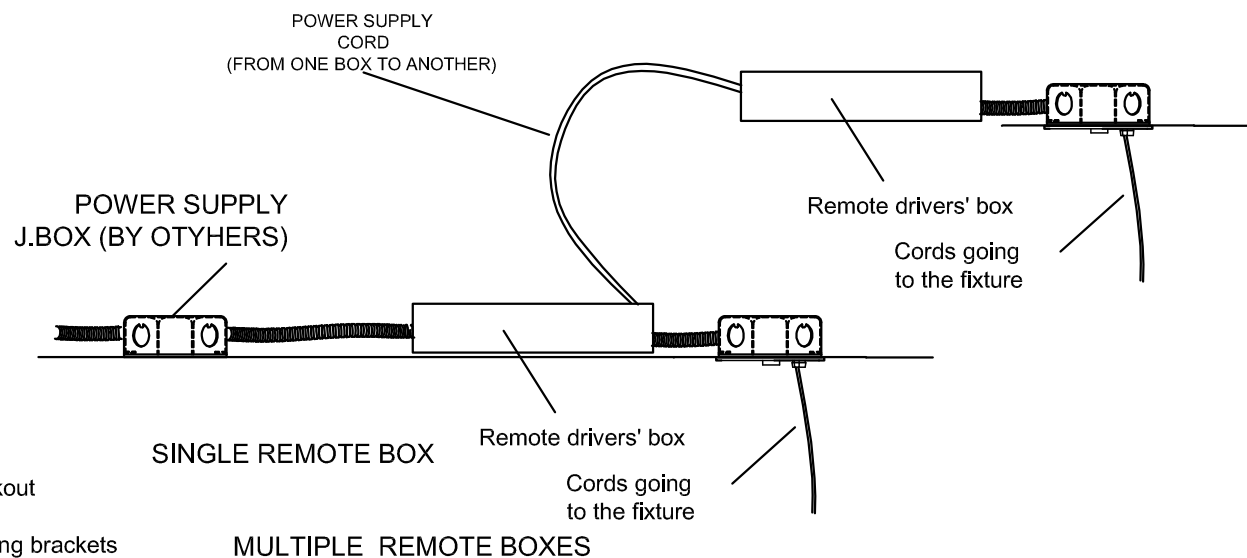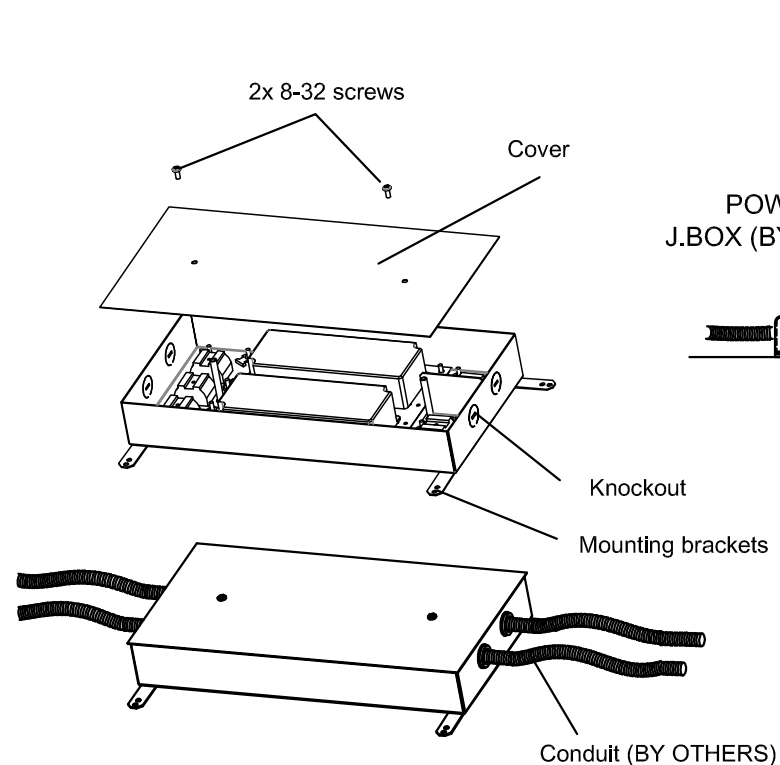

IMPORTANT NOTE:
WHEN MORE THAN 1 REMOTE BOXES
ARE SUPPLIED, THEY ALL MUST BE CONNECTED
TO THE SAME POWER SUPPLY BRANCH CIRCUIT

1. Remove the 2x 8-32 screws and the drivers' box cover.
 2. Remove the necessary Knockouts.
 3. Attach the conduits (not provided).
 4. Make the wiring connections.
 5. Install the cover using the previously removed screws.
- Use the mounting brackets to secure the box in place.

**NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES
WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS**

FIXTURE DESCRIPTION: MICRO SQ DE/ MICRO SQ II DE PENDANT