

## 1 IMPORTANT NOTE

Fixture comes partially assembled.

⚠ Ensure electrical circuit is disconnected before installation.

⚡ Luminaires must be installed in accordance with National electrical code and local regulation.

## 2 STANDALONE / NON-CONTINUOUS INSTALLATION

### STEP 1: CEILING CUT OUT

Cut an opening in the ceiling as shown in FIG 1, following the dimensions provided in Table 1. Before proceeding with installation, verify that the cutout dimensions are accurate by passing the fixture assembly through the opening to ensure a proper fit.

Table 1

Fixture length	12"	18"	24"	36"	48"	60"	72"	84"
X	7.25"	7.25"	7.25"	7.25"	7.25"	7.25"	7.25"	7.25"
Y	12.75"	18.75"	24.75"	36.75"	48.75"	60.75"	72.75"	84.75"

### STEP 2: THREADED ROD INSTALLATION (Access is required above the ceiling)

Measure the threaded rods according to the provided dimensions and cut off any excess material prior to installation. Each rod must be cut to a length of  $9.25 \pm 0.13$  inches from the bottom of the ceiling, as illustrated in FIG 2.

Space the threaded rods based on the dimensions shown in FIG 3, referencing TABLE 2 for exact measurements.

Install the fixture into the ceiling using the threaded rods (supplied by others) and secure it in place using 1/4-20 locknuts (also by others). Access the area above the ceiling through an appropriate opening and secure using locknuts.

Ensure the fixture is level and securely fastened using all necessary hardware.

Table 2

Fixture length	12"	18"	24"	36"	48"	60"	72"	84"
A	11"	17"	23"	35"	47"	-	-	-
B	-	-	-	-	-	30.5"	35.5"	41.5"
C	-	-	-	-	-	5.92"	5.92"	5.92"
D	6.04"	6.04"	6.04"	6.04"	6.04"	6.04"	6.04"	6.04"

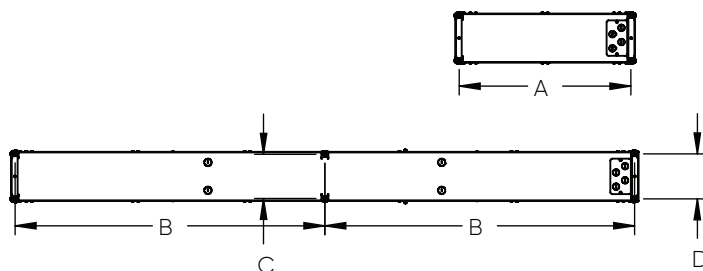


FIG 3

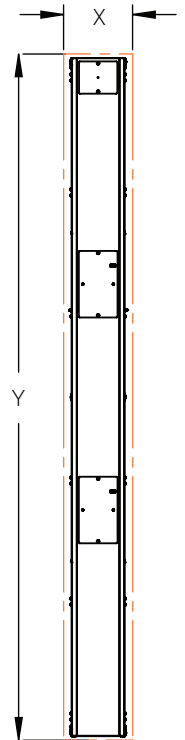


FIG 1

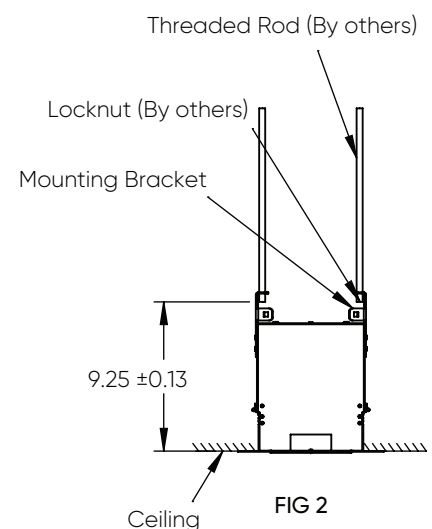


FIG 2

### STEP 3 : WIRING CONNECTION

Remove the electrical panel cover as shown in FIG 4.

Break out a knockout opening to allow for necessary electrical connections.

Connect the conduit wires to the power supply. Be sure to follow color codes and/or labeling for correct polarity on (+) and (-) wire connections.

After completing all electrical connections, reattach the electrical panel cover using two #8-32 screws as shown in FIG 4.

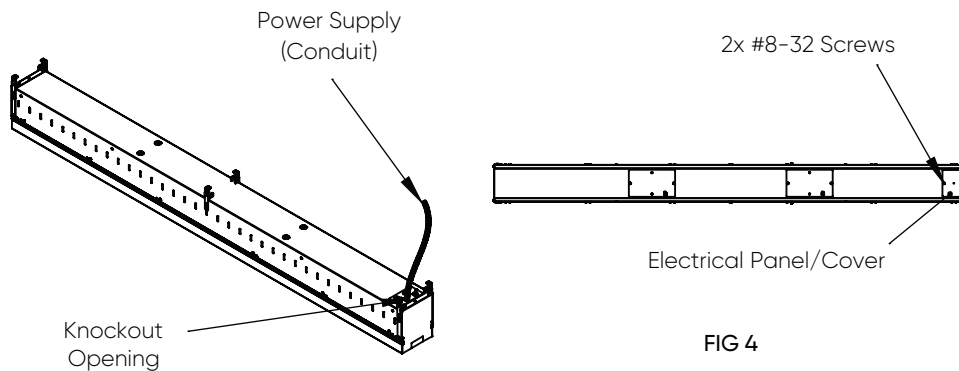


FIG 4

### STEP 4 : FINISHING

Install the provided trimless flange using drywall screws. This will conceal any excess cutouts and unnecessary fixture features, giving the installation a neat and clean finish.

Complete the installation by applying mudding over the perforated flange to create a seamless appearance (see FIG 5).

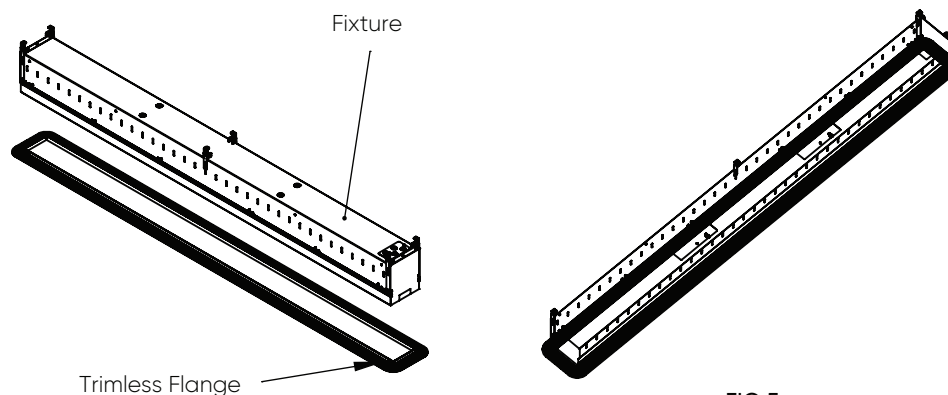


FIG 5