

TIMPANI SQ SURFACE™

WEB PIN™ 625

INSTALLATION - TIMPANI SQ SURFACE
PAGE 1 OF 2

FIXTURE COMES PARTIALLY ASSEMBLED




PLEASE ENSURE ELECTRICAL CIRCUIT IS
DISCONNECTED BEFORE INSTALLATION




NEVER TOUCH THE YELLOW PORTION OF THE
LED CHIP OR DAMAGE MAY OCCUR.

NOTE THAT THE FIXTURE IS SHIPPED AS FOLLOWS:

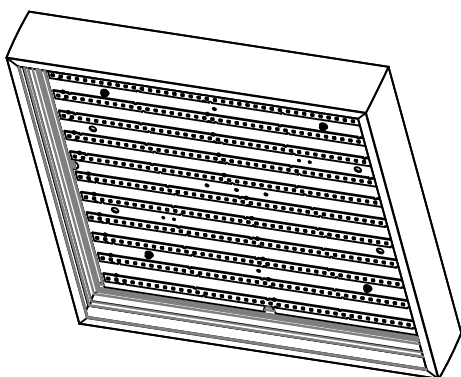

FRAME ASSEMBLY

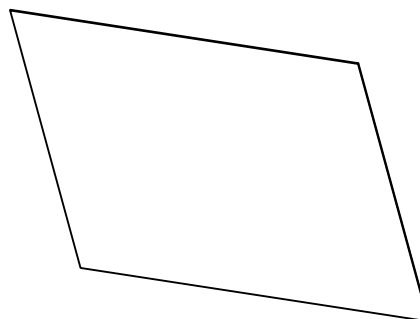

DIFFUSER

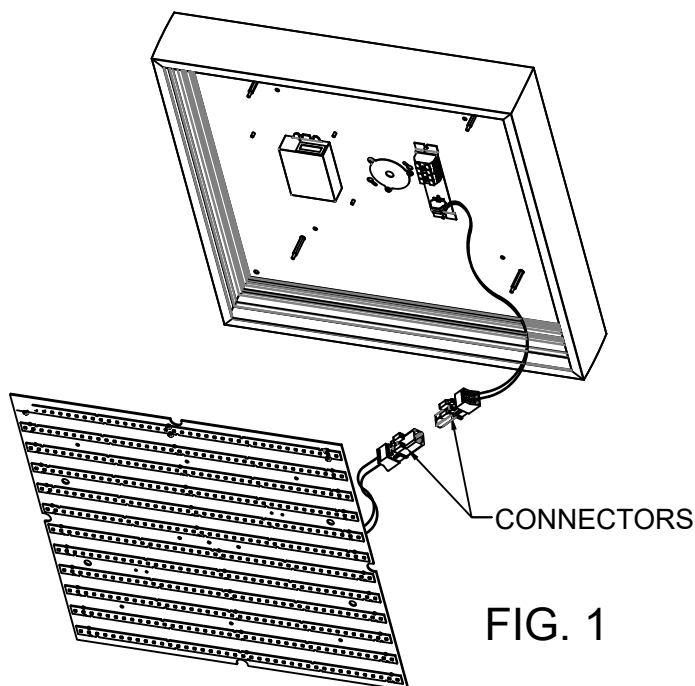


FIG. 1

INSTRUCTIONS:

1. Separate the LED board plate from the frame and unplug the connectors. (FIG. 1)

TIMPANI SQ SURFACE™

WEB PIN™ 625

INSTALLATION - TIMPANI SQ SURFACE
PAGE 2 OF 2

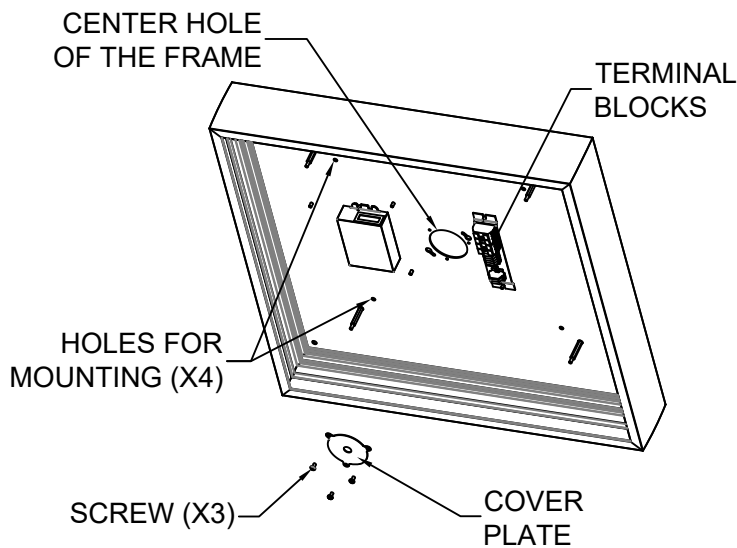


FIG. 2

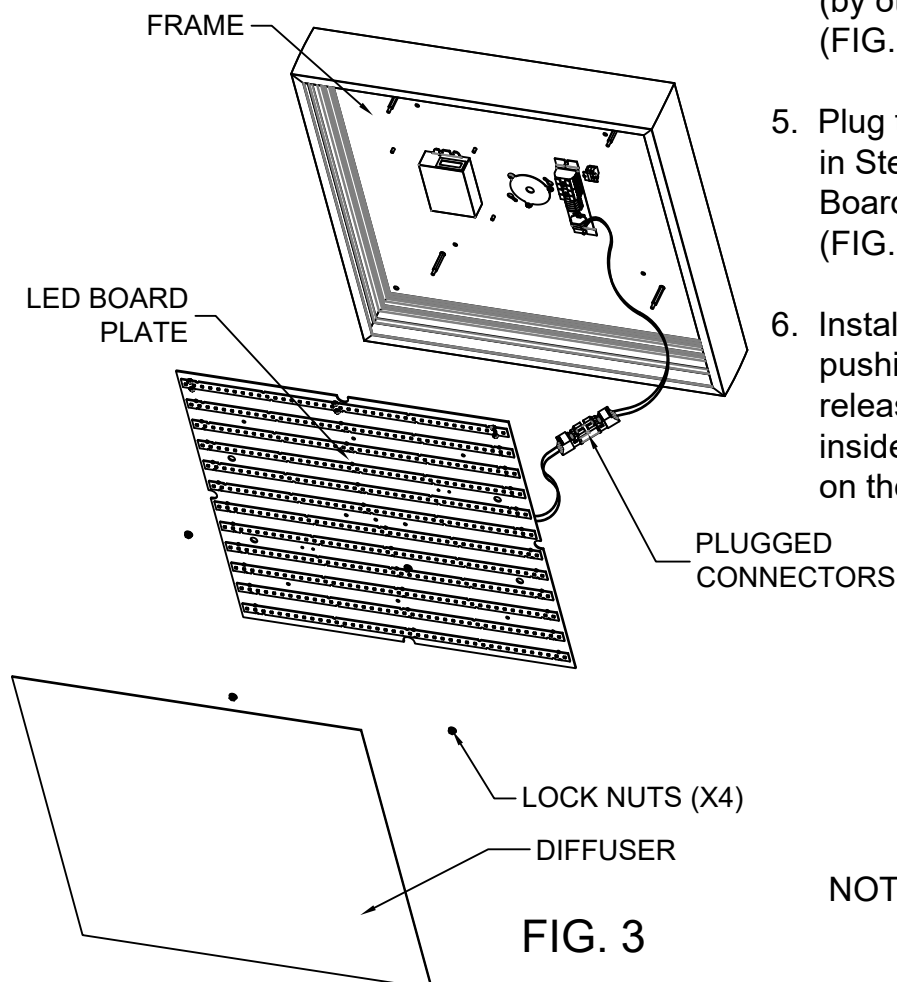


FIG. 3

2. Remove the cover plate and pass the main power supply wires through the center hole of the frame. (FIG. 2)
3. Mount the frame to the ceiling by using the holes for mounting with fasteners (not included / depends on the structure of the ceiling).
4. Pass the input wires from the terminal block through the cover plate and make all the necessary connections to the main power supply (please refer to the provided Wiring Diagram). Carefully push the line wires and connections back inside the junction box (by others). Replace the cover plate. (FIG. 2)
5. Plug the connectors that were disconnected in Step 1 back together. Mount the LED Board plate and secure with lock nuts. (FIG.3)
6. Install the diffuser by slightly bending and pushing it on one side of the frame and release once entire edge of the diffuser is inside. Make sure that the diffuser is sitting on the trim of the frame.

NOTE: USE COTTON GLOVES WHEN HANDLING THE DIFFUSER.