

WEB PIN ™ CODE: 267

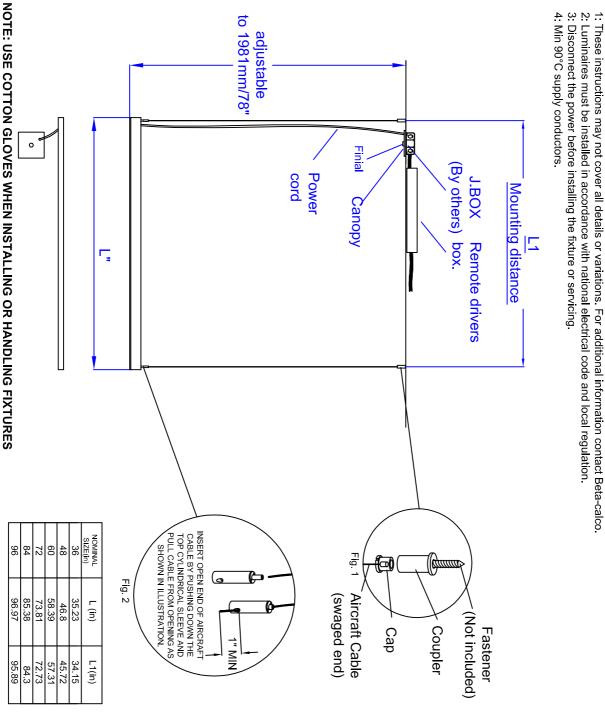


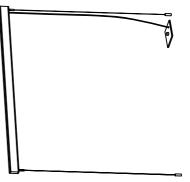

- Mount the couplers to the ceiling using appropriate fasteners -NOT INCLUDEDaccording to the structure of the ceiling - see
- Pass the aircraft cables through the caps see
- ယ Fasten the caps to the couplers
- 4 Lift the fixture and attach the loose ends of the Aircraft Cables to the cable gliders -see Fig.2
- S all necessary wiring connections and attach the canopy to the junction box using the Pass the power cord through the canopy Make bracket/nipple/finial assembly provided.
- Level the fixture using the cable gliders. To aircraft cables after the fixture is level release the grip lock, press down on the tip of the mechanism. If desired, clip the excess

circuit/junction box. Note: The canopy is used to cover the branch

- DO NOT TOUCH THE FIXTURES WITH LED: MPORTANT NOTE FOR



FIXTURE DESCRIPTION: MICRO STRAIGHT II


WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS


WEB PIN ™ CODE: 267

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

FROM THE BODY OF TH	MAX DRIVER BOX REMOT
HE BODY OF THE FIXTURE	REMOTE DISTANCE

90ft	60ft	40ft	Max. remote distance
14 AWG	16 AWG	18 AWG	Remote wire size

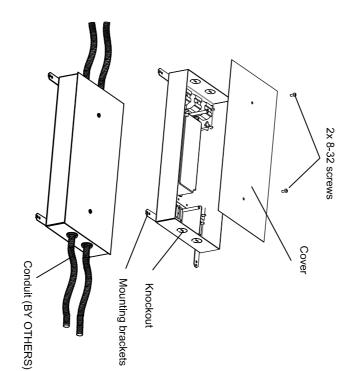

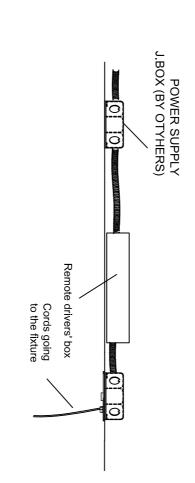

- 1. Remove the 2x 8-32 screws and the drivers' box cover.
- 2. Remove the necessary Knockouts.
- 3. Attach the conduits (not provided).
- 4. Make the wiring connections.
- Use the mounting brackets to secure the box in place. 5. Install the cover using the previously removed screws.

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS

FIXTURE DESCRIPTION: MICRO STRAIGHT II