

FIXTURE COMES PARTIALLY ASSEMBLED



PLEASE ENSURE ELECTRICAL CIRCUIT IS DISCONNECTED BEFORE INSTALLATION



NEVER TOUCH THE YELLOW PORTION OF THE LED CHIP OR DAMAGE MAY OCCUR

Fittings are supplied with HFR dimming. Up and down light are not separately switched unless requested at time of order entry.



1 - MOUNT CANOPY BACKPLATE

2 - INSERT THE 150" LONG AIRCRAFT CABLES INTO THE CABLE GLIDERS ON THE HUB (SEE FIG 2)



3 - IF THE HUB IS NOT ALREADY CONNECTED TO THE FIXTURE, FASTEN THE AIRCRAFT CABLES TO THE SUSPENSION BRACKETS USING SUPPLIED 1/4-20 SCREWS AND NUTS (SEE FIG 3)


4 - ENSURE THAT THE AIRCRAFT CABLES ARE PASSING THROUGH THE CANOPY AND HUB COVER, AND SUSPEND THE FIXTURE BY THREADING BOLT ON CANOPY BACKPLATE THROUGH THE AIRCRAFT CABLE LOOPS, SECURE WITH INCLUDED NUT



5 - ADJUST HEIGHT OF FIXTURE AND TRIM EXCESS AIRCRAFT AND POWER CABLES (ENSURE THAT THE POWER CABLE IS PASSING THROUGH THE CENTRE OF THE HUB AND THE CANOPY)



6 - MAKE ALL NECESSARY ELECTRICAL CONNECTIONS, LIFT CANOPY COVER INTO POSITION AND SECURE WITH SCREWS x3



7 - INSERT DIFFUSERS BY SLIGHTLY TWISTING AND LIFTING INTO PLACE (TEXTURED SIDE FACING DOWN)

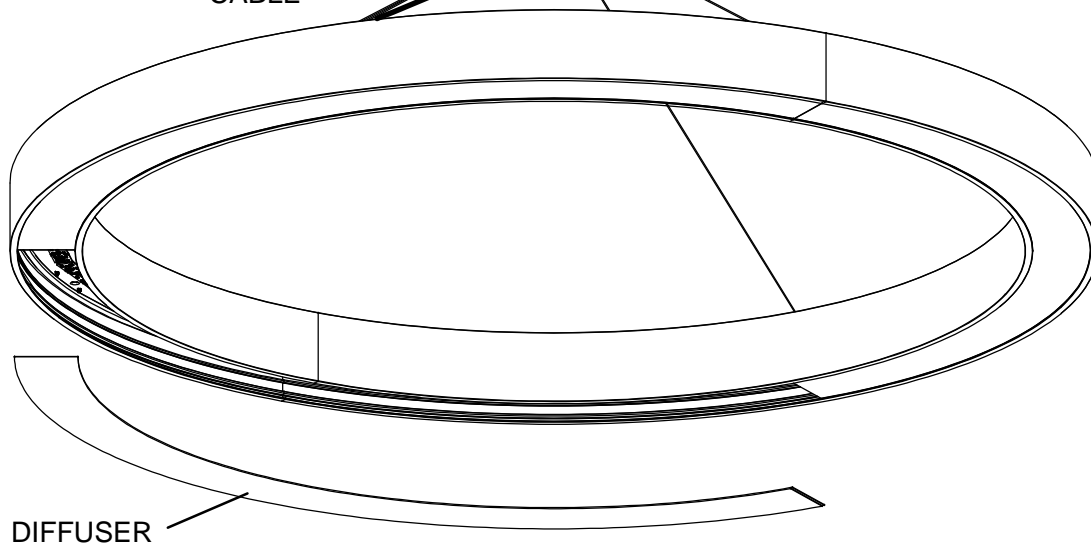


FIG 1

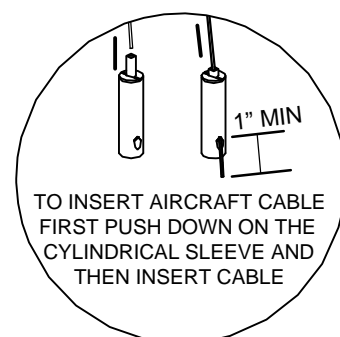


FIG 2

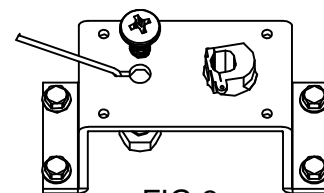


FIG 3