

MATREX RD DUAL™

WEB PIN™245

**INSTALLATION
INSTRUCTIONS**TYPE: PENDANT - **CANOPY A (CN1)**

FIXTURE CODE:

MRDP1P01 / MRDP2P01 / MRDP3P01

PAGE 1 OF 1

FIXTURE COMES PARTIALLY ASSEMBLED.



Ensure electrical circuit is disconnected before installation.



Luminaires must be installed in accordance with national electrical code and local regulation.





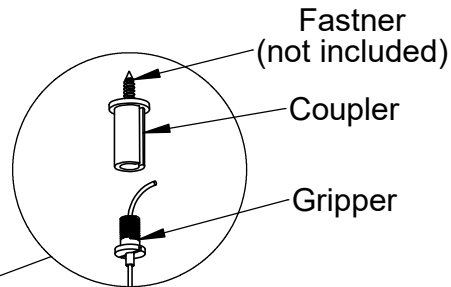
Fig. 1:
Initial stage of coupler +
aircraft cableFig. 2:
Fully fastened
coupler

Fig. 3 - Mounting points

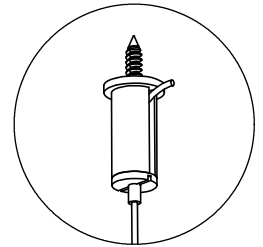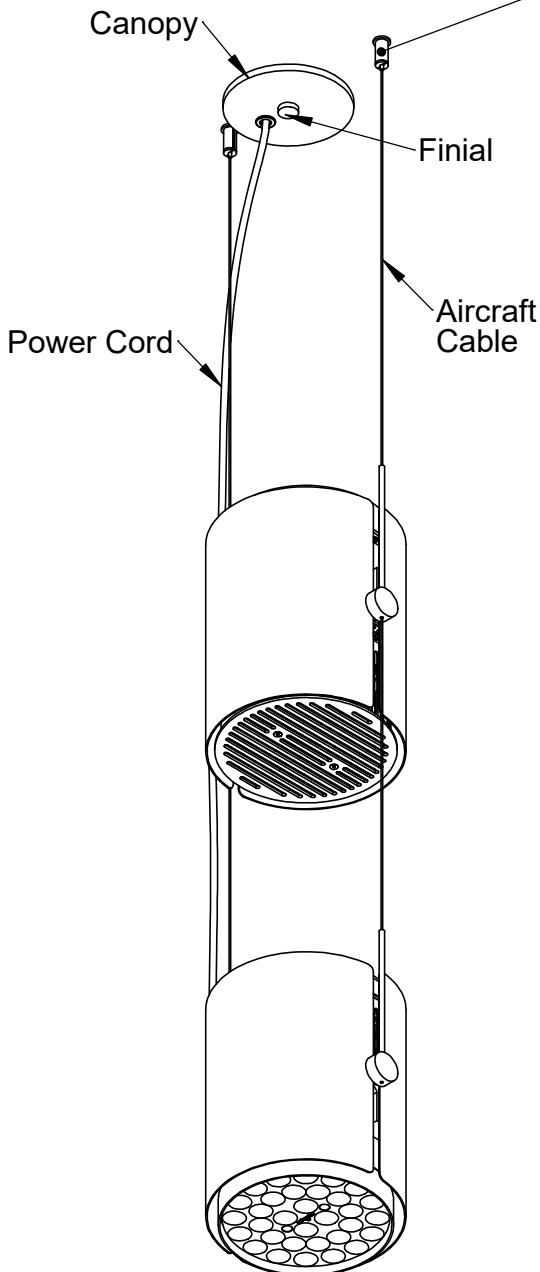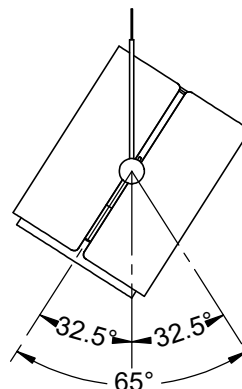

1. Mount the couplers to the ceiling using appropriate fasteners (not included) according to the structure of the ceiling (see Fig. 1).
2. See Fig.3 for the mounting points. The internal thread of the coupler is 1/4-20. If screwed in from the top of the coupler, use maximum screw length of 5/16\".
3. Pass the aircraft cable through the gripper and make sure to feed the cable through the slot in the coupler before hand. Fasten the gripper into the coupler (see Fig. 2).
4. Level the fixture by pulling the aircraft cable if necessary.
5. Make appropriate wiring connections and attached the canopy assembly to the junction box using the bracket/nipple/finial assembly provided.
6. When rotating the fixture, make sure the side tubes are parallel with each other (Fig. 4).

Fig. 4:
Angled position

If it's the indirect version of the fixture, the heads will be pointing in the opposite direction.

NOTE: Use cotton gloves when installing or handling fixtures with plated finish or glass/faux glass decorative components.