

**MATREX RD SINGLE™**

WEB PIN™243

**INSTALLATION  
INSTRUCTIONS**

TYPE: PENDANT - **CANOPY B (CN2)**  
 FIXTURE CODE: MTRP1P01 / MTRP2P01  
 PAGE 1 OF 1

FIXTURE COMES PARTIALLY ASSEMBLED.



Ensure electrical circuit is disconnected before installation.



Luminaires must be installed in accordance with national electrical code and local regulation.

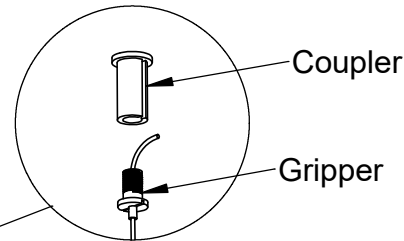
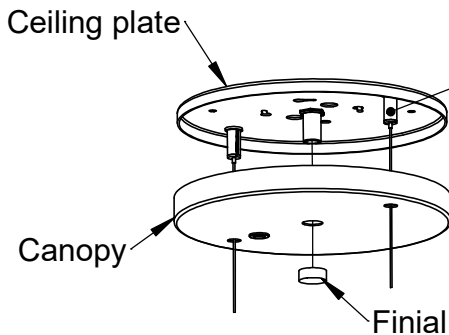


Fig. 1:  
Initial stage of coupler +  
aircraft cable


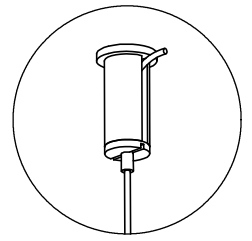


Fig. 2:  
Fully fastened  
coupler

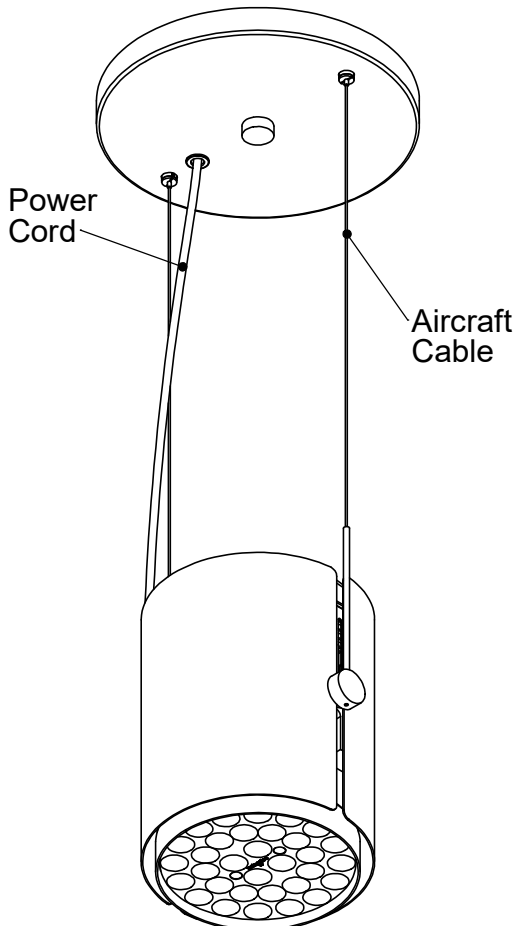

1. Mount the ceiling plate to the ceiling using the mounting holes located at the corners.
2. Fasten the couplers to the studs found on the ceiling plate (see Fig. 1).
3. Pass the aircraft cable through the gripper and make sure to feed the cable through the slot in the coupler before hand. Fasten the gripper into the coupler while passing through the holes in the canopy (see Fig. 2).
4. Level the fixture by pulling the aircraft cable if necessary.
5. Make appropriate wiring connections and attached the canopy assembly to the switch box (4"x2.125") using the bracket/nipple/finial assembly provided.
6. When rotating the fixture, make sure the side tubes are parallel with each other (Fig. 4).

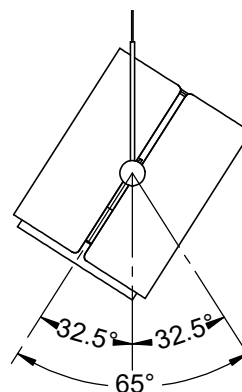


Fig. 4:  
Angled position

If it's the indirect version of the fixture, the heads will be pointing in the opposite direction.

**NOTE:** Use cotton gloves when installing or handling fixtures with plated finish or glass/faux glass decorative components.