


FIG 1

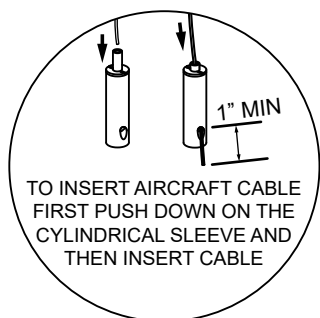

TO INSERT AIRCRAFT CABLE
FIRST PUSH DOWN ON THE
CYLINDRICAL SLEEVE AND
THEN INSERT CABLE

FIG 3

FIXTURE COMES PARTIALLY ASSEMBLED



PLEASE ENSURE ELECTRICAL CIRCUIT IS
DISCONNECTED BEFORE INSTALLATION



NEVER TOUCH THE YELLOW PORTION OF THE
LED CHIP OR DAMAGE MAY OCCUR

1 - MOUNT CANOPY MOUNTING PLATE OVER JUNCTION
BOX. PLEASE ENSURE THAT THE FASTENERS ARE
INSTALLED INTO THE SUPPORTING STRUCTURE OF
THE CEILING. THIS LUMINAIRE MUST SUPPORTED
INDEPENDENTLY FROM AN OUTLET BOX.

2 - INSERT THE 150" LONG AIRCRAFT CABLES INTO THE
CABLE GLIDERS ON THE HUB (SEE FIG 3).

3 - IF THE HUB IS NOT ALREADY CONNECTED TO THE
FIXTURE, FASTEN THE AIRCRAFT CABLES TO THE
CABLE GLIDERS ON THE FIXTURE (SEE FIG 2).

4 - ENSURE THAT THE AIRCRAFT CABLES ARE
PASSING THROUGH THE CANOPY AND HUB COVER,
AND SUSPEND THE FIXTURE BY THREADING THE BOLT
ON THE CANOPY MOUNTING PLATE THROUGH THE
AIRCRAFT CABLE LOOPS, SECURE WITH INCLUDED
NUT.

5 - ADJUST HEIGHT OF FIXTURE BY ADJUSTING THE
150" AIRCRAFT CABLES. TRIM EXCESS AIRCRAFT AND
POWER CABLES (ENSURE THAT THE POWER CABLE IS
PASSING THROUGH THE CENTRE OF THE HUB AND
THE CANOPY).

6 - MAKE ALL NECESSARY ELECTRICAL CONNECTIONS,
LIFT CANOPY COVER INTO POSITION AND SECURE
WITH SCREWS (X3).

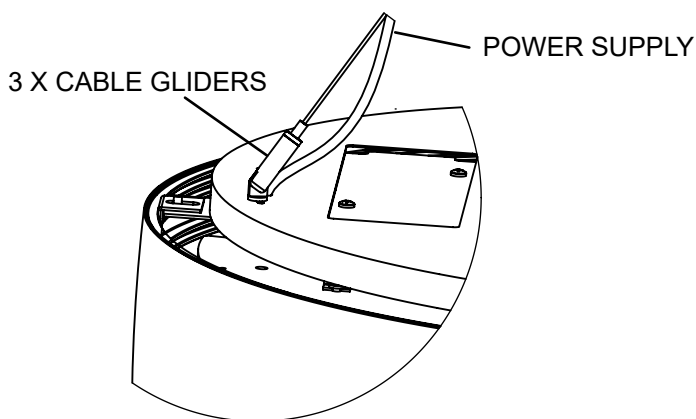


FIG 2