



- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

4. Apply drywall compound over the mud flange. Feather the compound out at least 12in from the edge of the fixture aperture. Once the mud is totally dry, the power can safely be turned on.

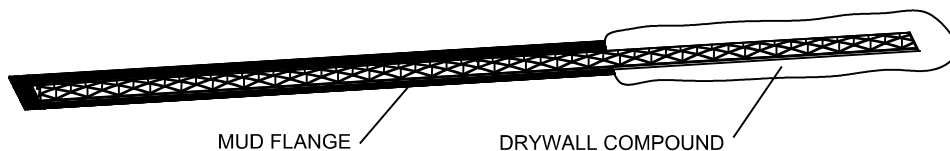

CONTINUOUS FIXTURE INSTALLATION:


5. Start from the first section with the power box. Temporary remove louvres and diffuser.

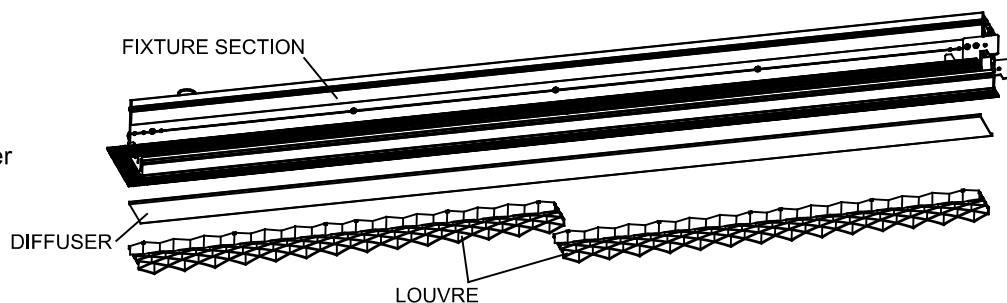

6. **WARNING:** Never touch the yellow portion of the LED chip or damage may occur.



Temporary remove reflectors with LED boards by untighten 4 screws on each reflector. Disconnect connectors between reflector and fixture.

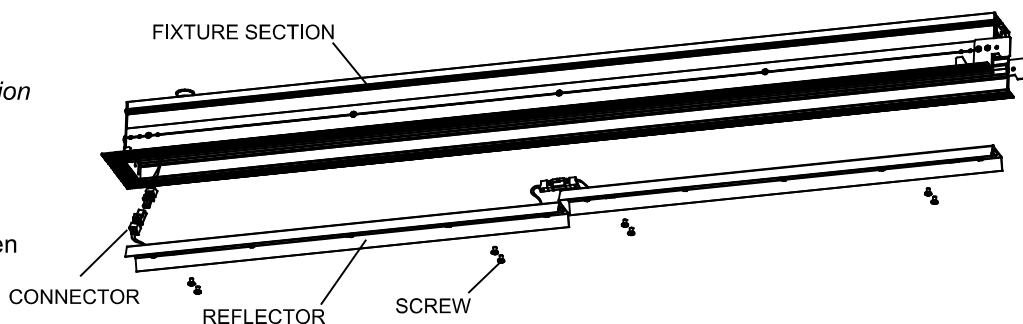

7. Repeat steps 2 and 3.
8. For the second section repeat steps 5 and 6.

9. Lift this second section in the ceiling cutout and make the wiring connection between both sections using connectors.

