

Fixture comes partially assembled.

⚠ Ensure electrical circuit is disconnected before installation.

⚠ Luminaires must be installed in accordance with national electrical code and local regulation.

FTQP1P02	L1 = 17.8"
FTQP1P03	L1 = 31.6"
FTQP1P04	L1 = 41.9"

Fig. 1

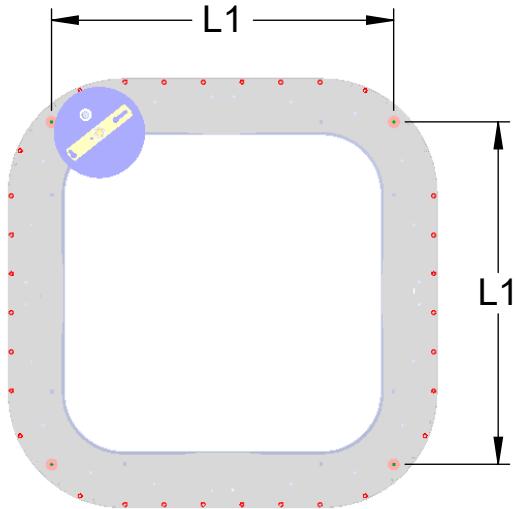


Fig. 2



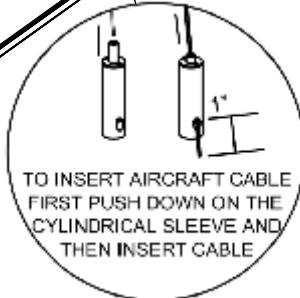


Fig. 3

1. Mount the couplers to the ceiling using appropriate fasteners (not included) according to the structure of the ceiling (see Fig. 1).
2. Pass the aircraft cables through the caps (see Fig. 2).
3. Fasten the caps to the couplers.
4. Lift the fixture and attach the loose ends of the four aircraft cables to the cable gliders (see Fig. 3).
5. Make appropriate wiring connections and attach the canopy to the junction box using the bracket/nipple/finial assembly provided.
6. Level the fixture using the cable gliders. To release the grip lock, press down on the tip of the mechanism. If desired, clip the excess aircraft cables after the fixture is leveled.

	A	B
FTQP1P02	18"	10"
FTQP1P03	18"	10"
FTQP1P04	18"	10"

MOUNTING DISTANCE: -
 • 18AWG: - 9.5' (2.9m)
 • 16AWG: - 19.5' (5.9m)
 • 14AWG: - 29.5' (9m)

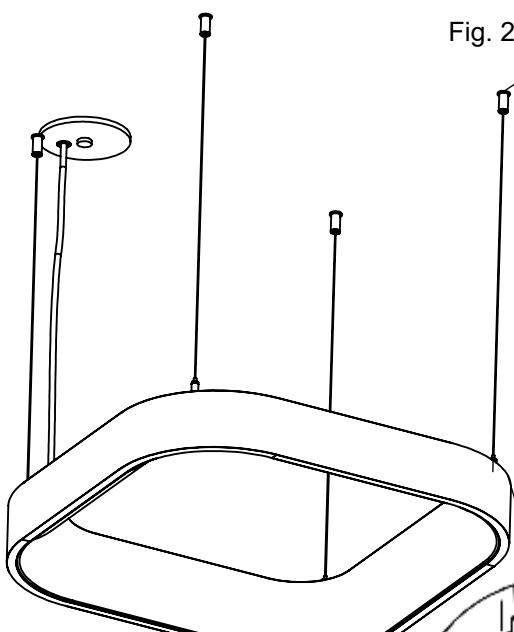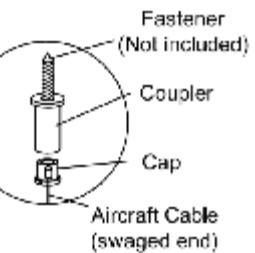