

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

1. Attach the mounting bracket to the switchbox using the appropriate fasteners - NOT INCLUDED - see Fig. 1.
2. Hang fixture on the mounting bracket - see Fig. 2 and Fig. 3.
3. Make all the necessary electrical connections using the appropriate connectors (heatshrink sheath, self-bonding insulating tape or any other IP65 rated protection)and then remove the fixture from the mounting bracket.

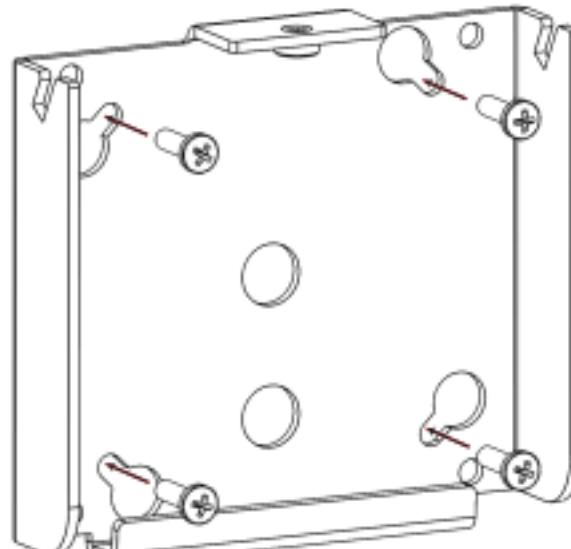


Fig. 1

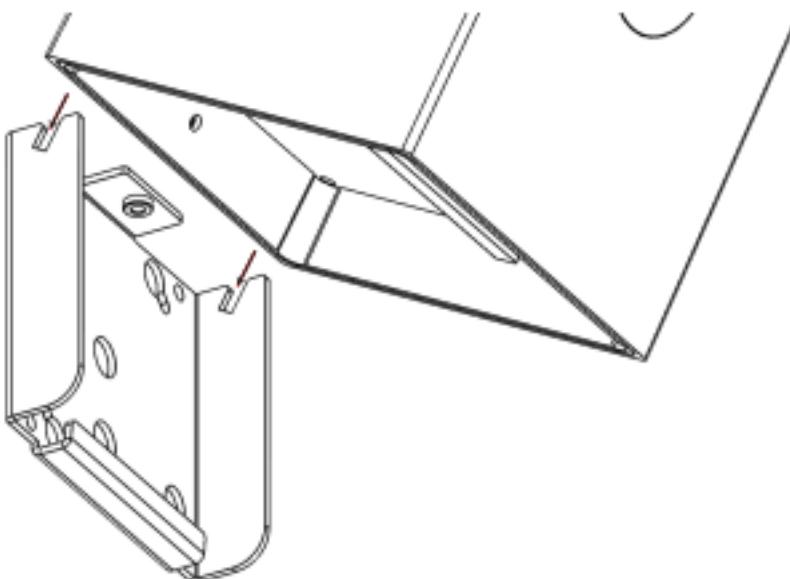


Fig. 2

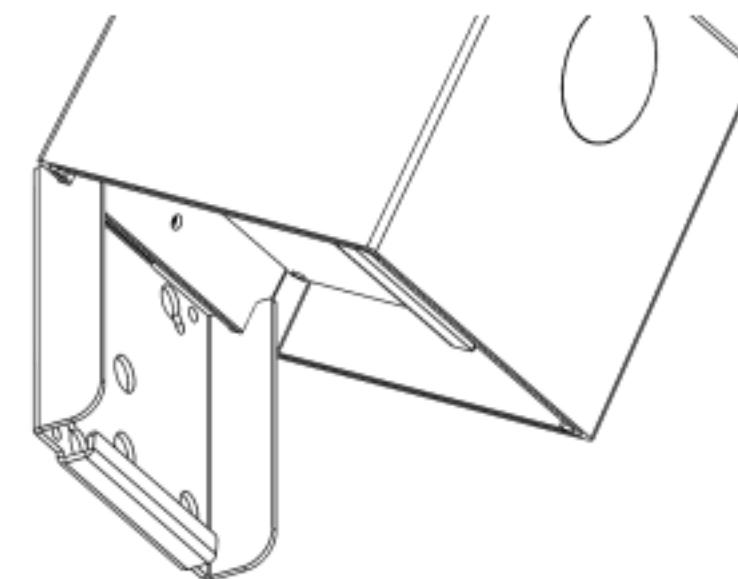


Fig. 3

**NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES
WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS**

Fixture Description: RAZER CUBE

BETA-CALCO INC. 25 Kodiak Crescent, TORONTO ONTARIO CANADA M3J 3E5

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

4. Push fixture on to mounting bracket - see Fig.4.
5. Carefully slide fixture down to mate the fixture to the bracket - see Fig. 5.
6. Using 8-32 screw, fasten fixture to mounting bracket till secure - see Fig. 6.

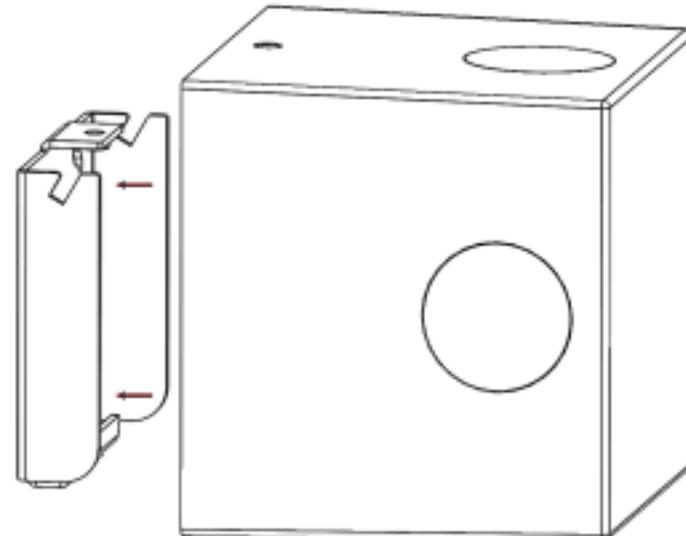


Fig. 4

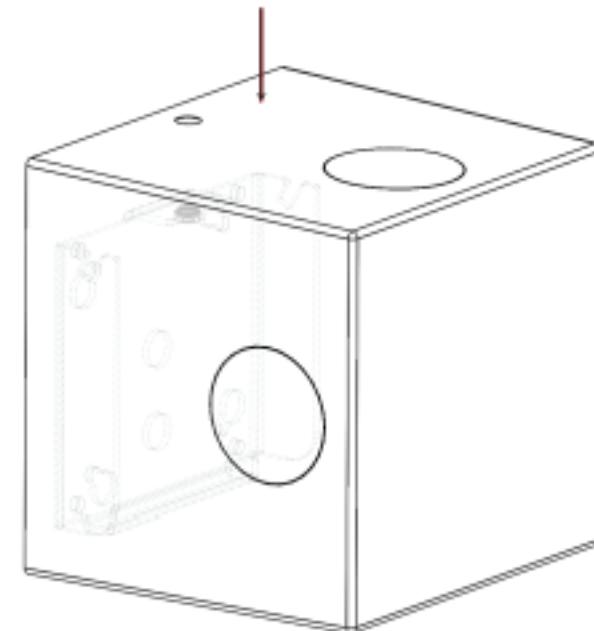


Fig. 5

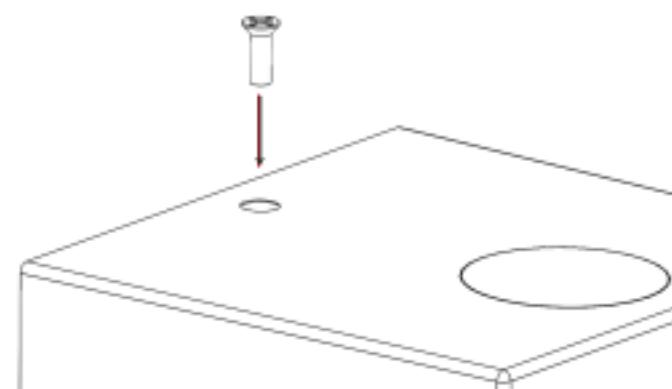


Fig. 6

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS

Fixture Description: Razer Cube

BETA-CALCO INC. 25 Kodiak Crescent, TORONTO ONTARIO CANADA M3J 3E5