FIXTURE NAME: RODEO SOLO - PENDANT

FIXTURE CODES: RDSP1P - RDSP2P

TYPE: STANDALONE [SLS1]

PAGE 1 OF 4

FIXTURE COMES PARTIALLY ASSEMBLED.



Ensure electrical circuit is disconnected before installation




Luminaires must be installed in accordance with national electrical code and local regulation.

Standalone / non-continuous installation:

- 1: Refer to "Aircraft Cable Suspension" installation instruction sheet for all mounting types.
- 2: Mount the couplers to the ceiling using appropriate fastners (not included).
- 3: Pass the aircraft cables through the caps.
- 4: Fasten the caps to the couplers.
- 6: Lift the fixture and attach the loose ends of the aircraft cables to the cable gliders.
- 7: Make all appropriate ceiling and wiring connections and attach the canopy to the junction box.
- 8: Level the fixture using the cable gliders.
- 9: Trim excess aircraft cable.

HARD CEILING:

GRID CEILING:

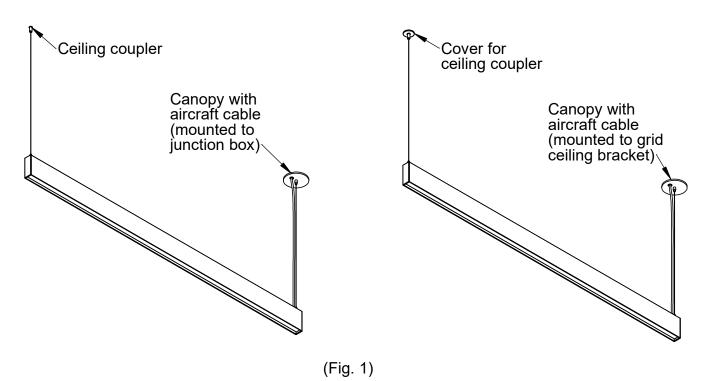

FIXTURE NAME: RODEO SOLO - PENDANT FIXTURE CODES: RDSP1P - RDSP2P

TYPE: CONTINUOUS [SLS2 / SLS3 / SLS4]

PAGE 2 OF 4

FIXTURE COMES PARTIALLY ASSEMBLED.




Ensure electrical circuit is disconnected before installation



Luminaires must be installed in accordance with national electrical code and local regulation.

Continuous installation:

- 10: Begin with the start fixture segment [code: SLS2] (see Fig. 1).
- 11: Refer to "Aircraft Cable Suspension" installation instruction sheet and make all appropriate ceiling connections.
- 12: Suspend and level the fixture. DO NOT trim excess aircraft cable until the entire fixture installation is complete.
- 13: Using a flat head screw driver, remove the top lid at the open end of the next fixture segment; either middle [SLS3] or end [SLS4] (see Fig. 2 for the end fixture segment).
- 14: Unscrew and remove the lock bracket in the next fixture segment (see Fig. 3).
- 15: Suspend the middle / end [SLS3 / SLS4] fixture segment and connect it to the previous segment by sliding them together (see Fig. 4).
- 16: Open the latch mechanism on the middle / end segements [SLS3 / SLS4] and attach it to the hook on the previous segment. Push down the latch to pull the fixtures together (see Fig. 5).
- 17: Re-install the lock bracket removed in step 14 (see Fig. 3).

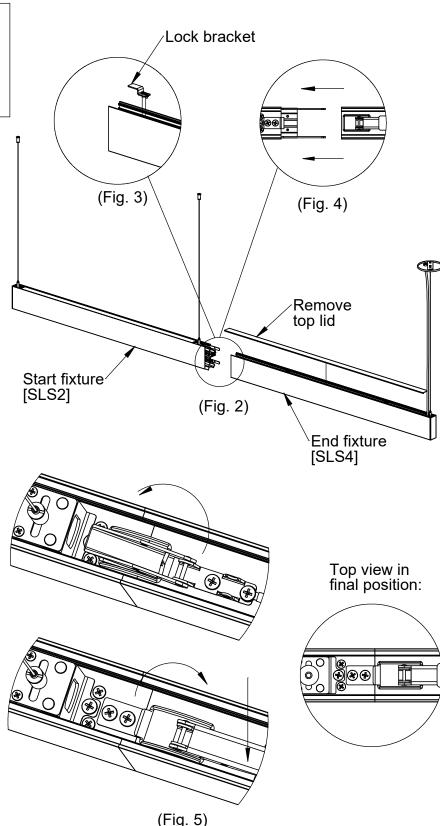

FIXTURE NAME: RODEO SOLO - PENDANT FIXTURE CODES: RDSP1P - RDSP2P

TYPE: CONTINUOUS [SLS2 / SLS3 / SLS4]

PAGE 3 OF 4

FIXTURE COMES PARTIALLY ASSEMBLED.




Ensure electrical circuit is disconnected before installation.



Luminaires must be installed in accordance with national electrical code and local regulation.

Continuous installation:

- 18: Connect the electrical connectors at junction between sections.
- 19: Re-install the top lid removed in step 13 (see Fig. 6).
- 20: Repeat steps 13-19 until entire fixture has been installed.
- 21: The end section [Code: SLS4] will have the power cord (See Fig. 6). Make appropriate wiring connections and pass the power cord through the canopy.

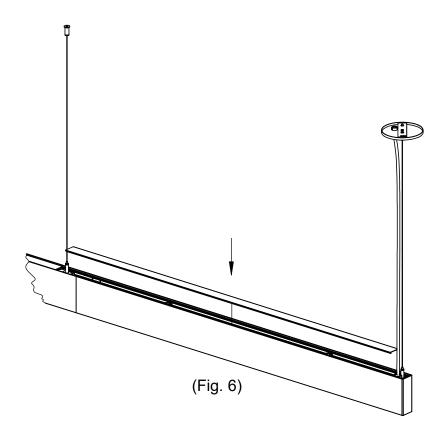

FIXTURE NAME: RODEO SOLO - PENDANT

FIXTURE CODES: RDSP1P - RDSP2P

TYPE: CONTINUOUS [SLS2 / SLS3 / SLS4]

PAGE 4 OF 4

FIXTURE COMES PARTIALLY ASSEMBLED.



Ensure electrical circuit is disconnected before installation.



Luminaires must be installed in accordance with national electrical code and local regulation.

Continuous installation: Section Type Reference

