



1. These instructions may not cover all details or variations. For additional information contact Beta-calco.
2. Luminaires must be installed in accordance with national electrical code and local regulation.
3. Disconnect the power before installing the fixture or servicing.
4. Never touch the yellow portion of the led chip or damage may occur.
5. Min 90°C supply conductors.

INSTALLATION STEPS:


1. REMOVE TOP COVERS.

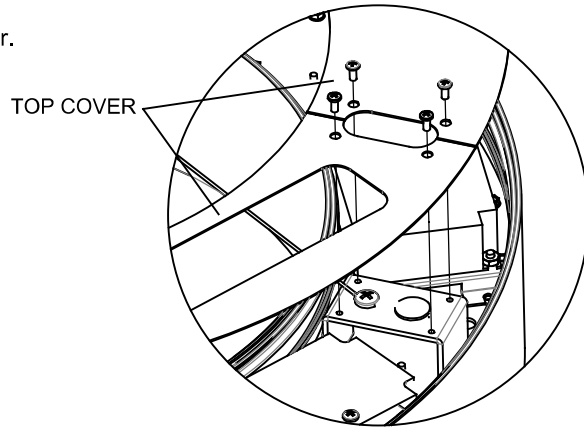


2. REMOVE SS2 SUSPENSION AIRCRAFT CABLE FROM BRACKET BY UNTIGHTEN #10-24 SCREW AND NUT.

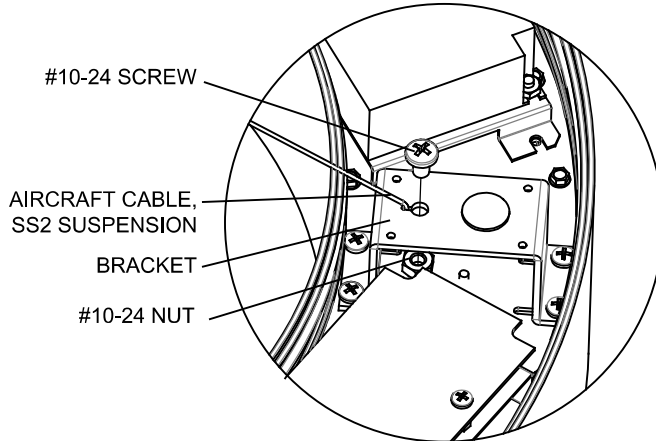

3. INSTALL GLIDER ON BRACKET USING 1/4-20 SELF LOCKING NUT (SUPPLIED). IF ACCESS IS LIMITED, FIRST REMOVE BRACKET BY UNTIGHTEN 4x SCREWS. REINSTALL BRACKET (IF NECESSARY).

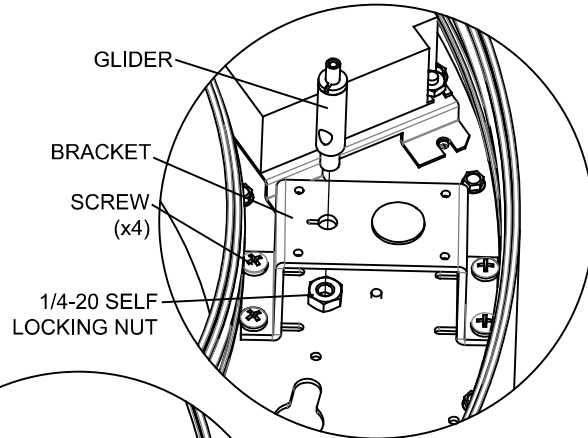

4. REINSTALL TOP COVERS.

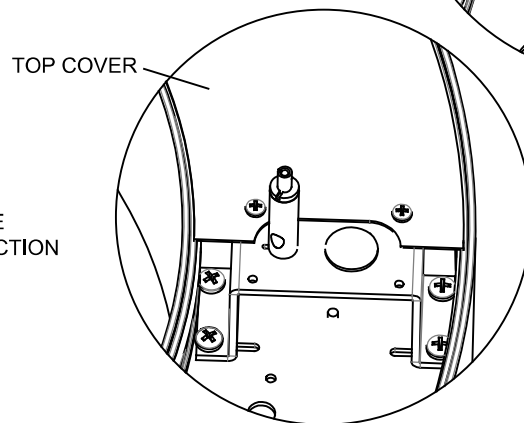

5. FOR AIRCRAFT CABLES INSTALLATION SEE RING'S 3 REGULAR INSTALLATION INSTRUCTION FOR SS1 VERTICAL SUSPENSION.

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS

FIXTURE DESCRIPTION: RING PD

BETA-CALCO INC. 1400 WHITEHORSE ROAD, UNIT 60, TORONTO ON M3J 3A7 CANADA