

**FIXTURE COMES PARTIALLY ASSEMBLED.**



Ensure electrical circuit is disconnected before installation.



Luminaires must be installed in accordance with national electrical code and local regulation.

1. Attach the canopy bracket and mounting bracket to the cylinder using 2x 4-40 screw and 1x 1/4-20 screw.
2. Attach mounting bracket to the ceiling using appropriate fasteners (not included).
3. Make all necessary electrical connections, lift the canopy into position and secure it using the magnets from the canopy bracket (see Fig. 1).

Note: The canopy is used to cover the branch circuit/junction box.



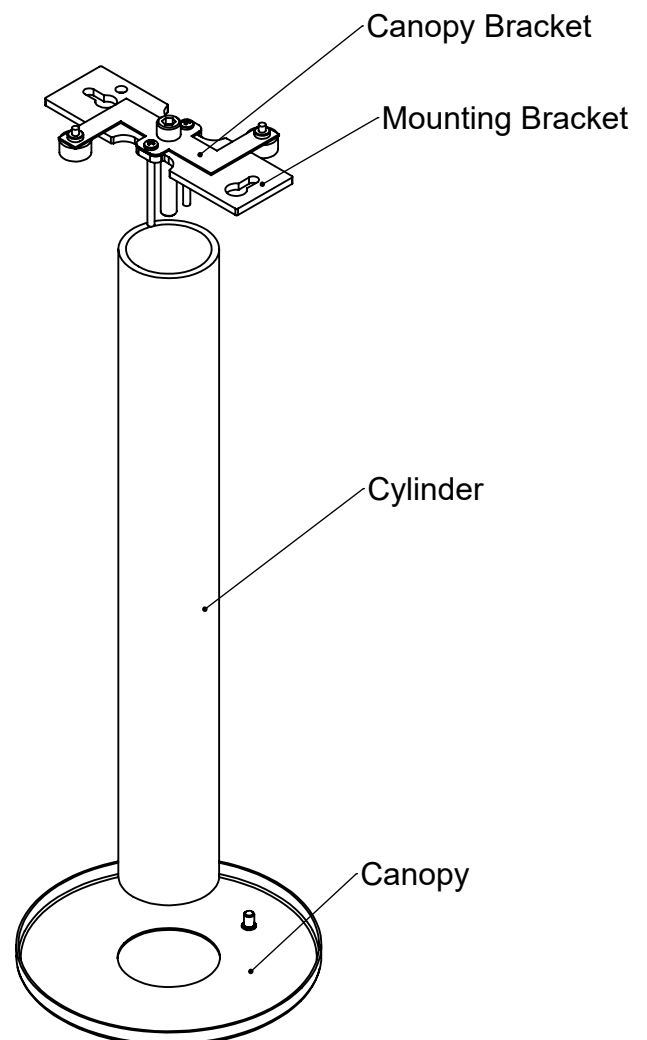



Fig. 1

## Integral Driver Installation

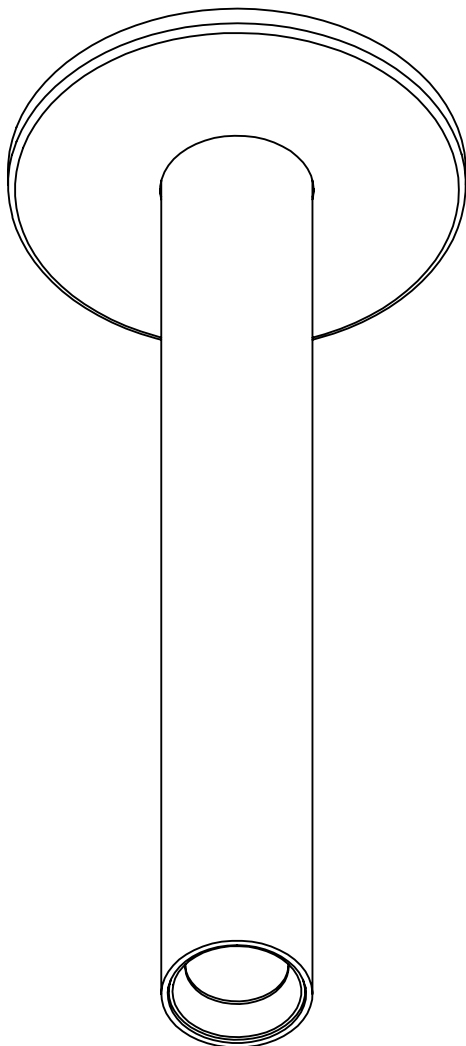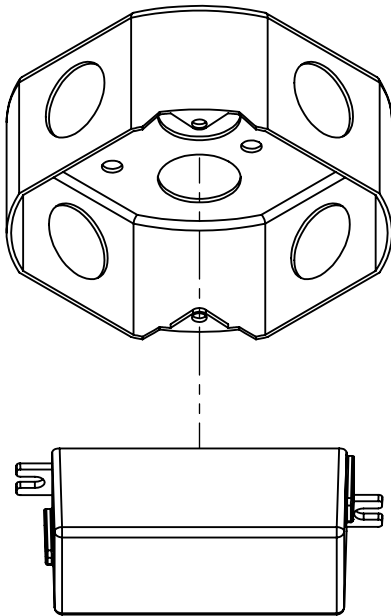

1. Make all necessary electrical connections.
2. Remove film from back of the driver.
3. Place driver inside the junction box.

## Remote Box Installation

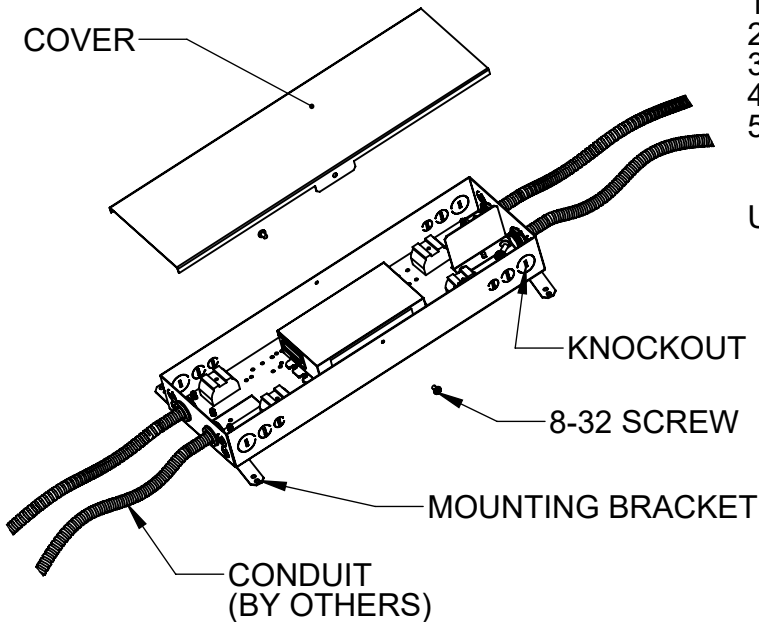

1. Remove the 2x 8-32 screws and the remote box cover
2. Remove the necessary knockouts
3. Attach the conduits "NOT SUPPLIED"
4. Make all necessary electrical connections
5. Re-attach the cover and secure it with the supplied screws

Use the mounting brackets to secure the box in place.