


- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

INSTALLATION STEPS:

- 1. Using Table for reference, cut the opening in the ceiling material.

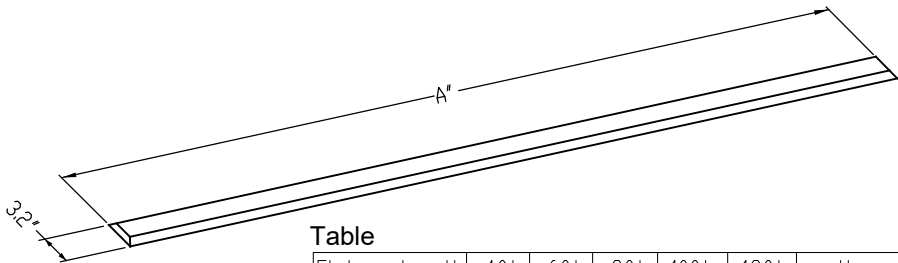

Table


Fixture length	4ft	6ft	8ft	10ft	12ft	continuous
A (in)	49	73	97	121	145	DAL+1"

SINGLE FIXTURE INSTALLATION:


- 2. **WARNING: Electrical shock hazard.**  
*Ensure the mains voltage supply is turned OFF before making any connections to the fixture. Do not turn the mains power supply back on untill all necessary electrical connections are made and fixture is closed.*  
*Make all necessary electrical connections according to all relevant electrical codes.*

Remove the power box from the top of the fixture. Install BX cable (by others) through the metal conduit connector (by others) and install onto the power box. Make electrical connections between wires of BX cable and fixture wires according to the wires labeling. Place connected wires inside the power box. Reinstall the power box to the fixture.

To have access inside the power box when fixture installed to the ceiling, remove power box cover inside of the fixture by untighten two screws.

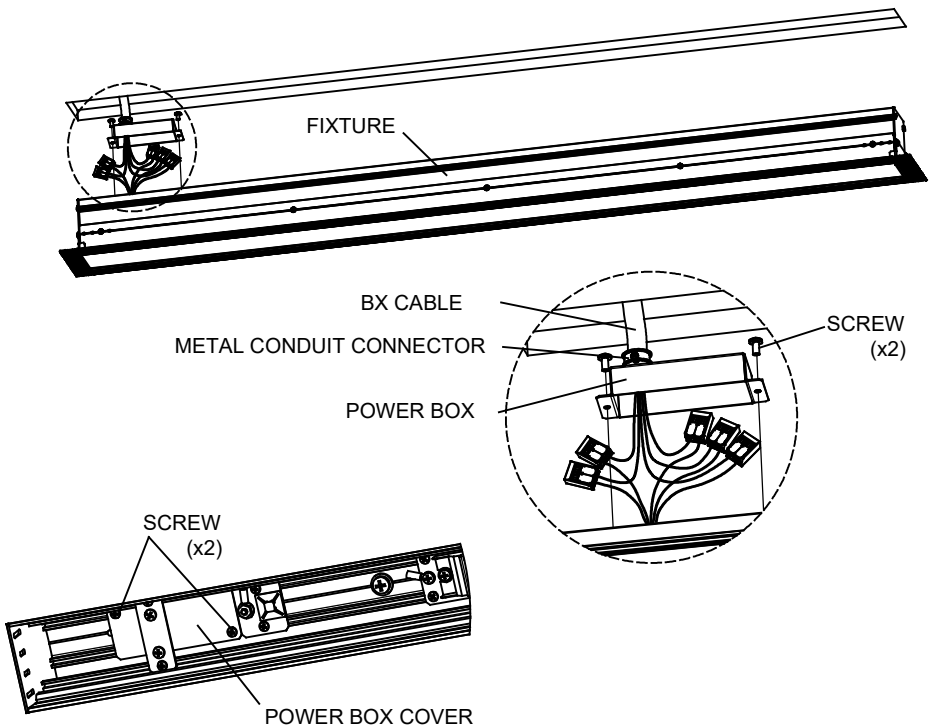


- 3. Lift the fixture into the ceiling cutout and fasten drilling screws (by others) through holes on the mud flange into anchors or wood blocking to fasten the fixture to the ceiling.

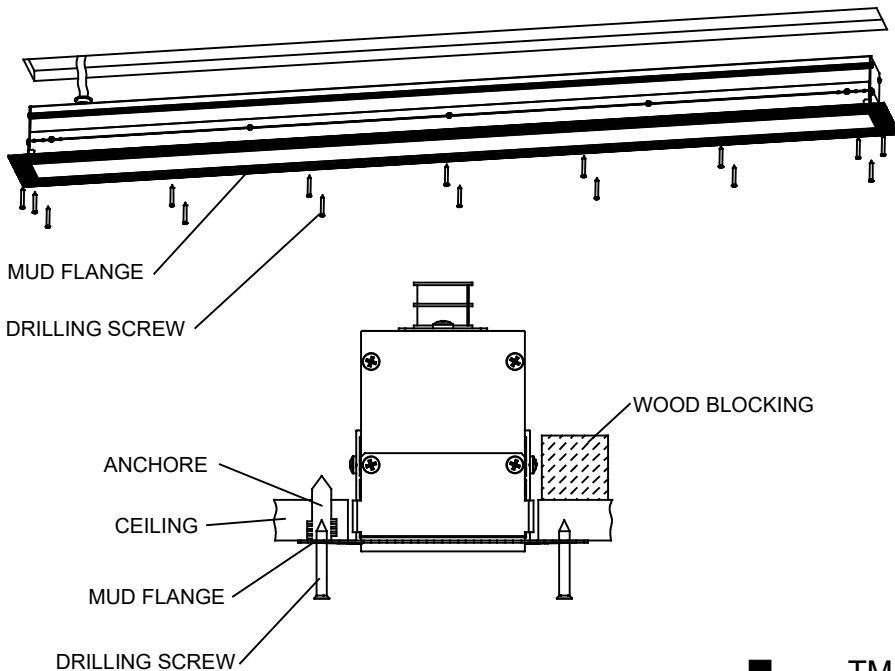


- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

- 4. Apply drywall compound over the mud flange. Feather the compound out at least 12in from the edge of the fixture aperture. Once the mud is totally dry, the power can safely be turned on.

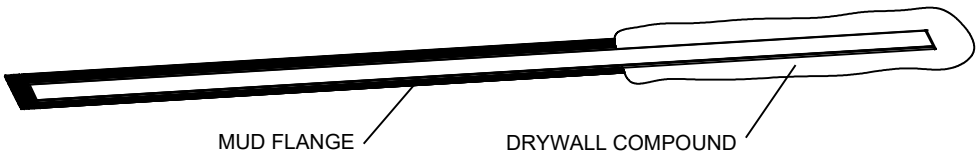

CONTINUOUS FIXTURE INSTALLATION:


- 5. Start from the first section with the power box. Temporarily remove baffle.

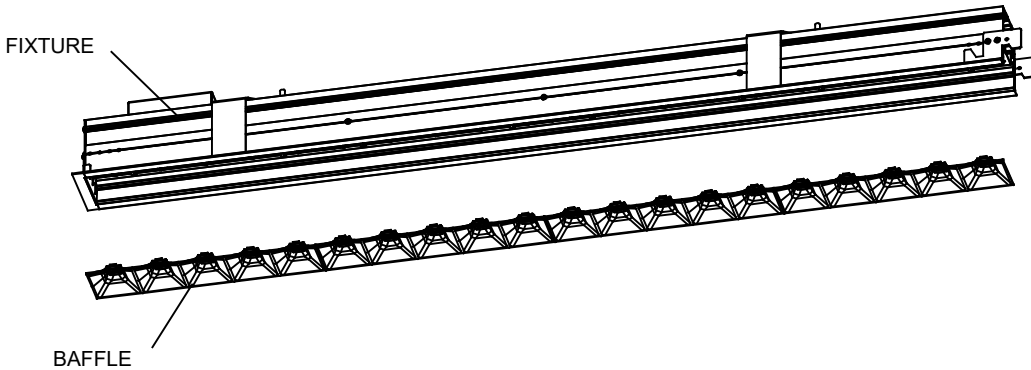

- 6. **WARNING:** Never touch the yellow portion of the LED chip or damage may occur.




Temporary remove reflectors with LED boards by untighten 4 screws on each reflector. Disconnect connectors between reflector and fixture.

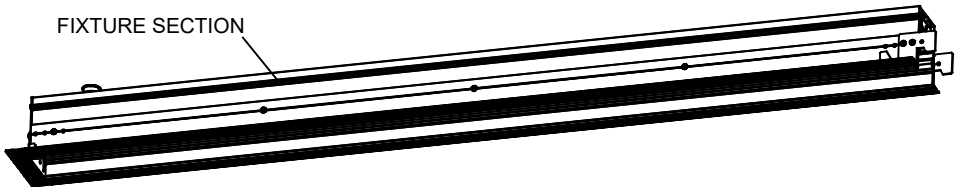


- 7. Repeat steps 2 and 3.
- 8. For the second section repeat steps 5 and 6.


- 9. Lift this second section in the ceiling cutout and make the wiring connection between both sections using connectors.

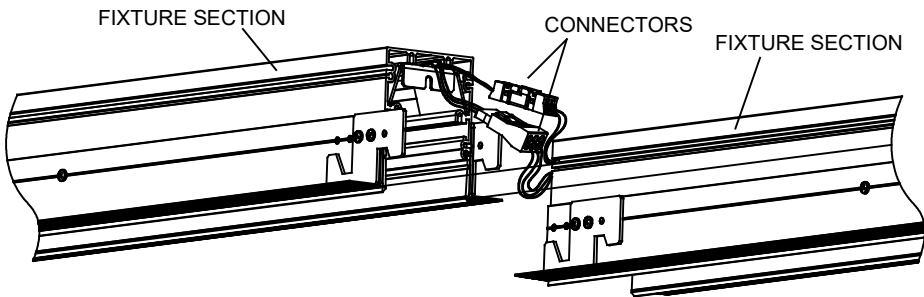

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

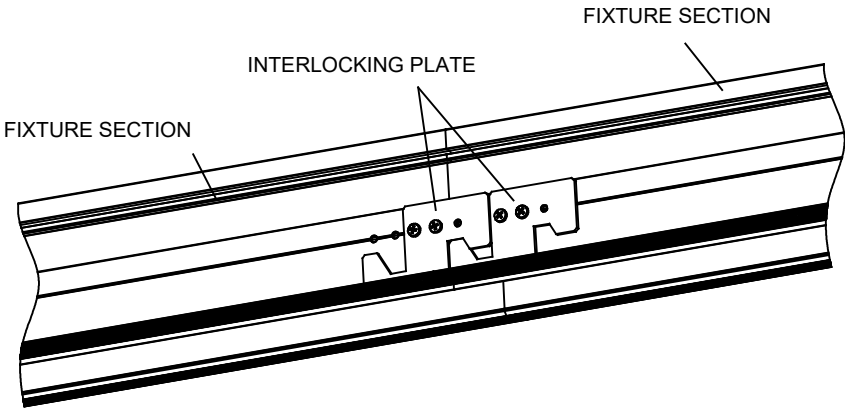

- 10. Join both sections together using interlocking plates on both sides of each section and fastening the nut on the joiner bracket.

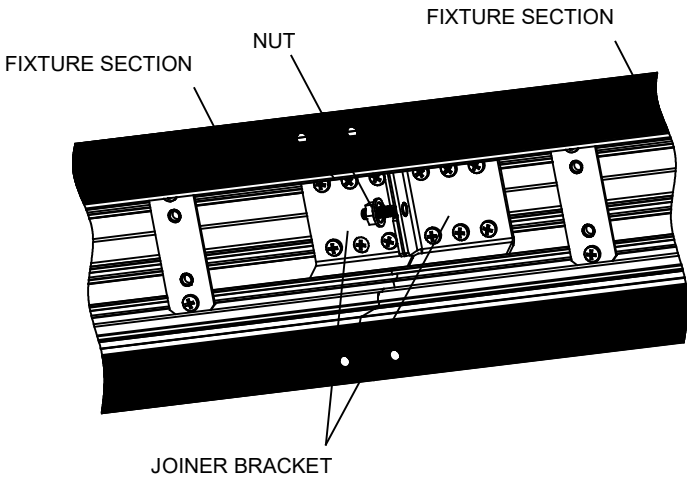

- 11. Repeat step 3 for the second section.
- 12. Reinstall reflectors with LED boards (see step 6).
- 13. Reinstall baffles (see step 5).
- 14. When all sections of the fixture secure to the ceiling, repeat step 4.