MICRO FLARE™

FIXTURE NAME: MICRO FLARE - PENDANT

FIXTURE CODES: MFLR1P - MFLR2P

TYPE: STANDALONE [SLS1]

PAGE 1 OF 3

FIXTURE COMES PARTIALLY ASSEMBLED.



Ensure electrical circuit is disconnected before installation



Luminaires must be installed in accordance with national electrical code and local regulation.

Standalone / non-continuous installation:

- 1: Refer to "Aircraft Cable Suspension" installation instruction sheet for all mounting types.
- 2: Mount the couplers to the ceiling using appropriate fasteners (not included).
- 3: Pass the aircraft cables through the caps.
- 4: Fasten the caps to the couplers.
- 6: Lift the fixture and attach the loose ends of the aircraft cables to the cable gliders.
- 7: Make all appropriate ceiling and wiring connections and attach the canopy to the junction box.
- 8: Level the fixture using the cable gliders.
- 9: Trim excess aircraft cable.

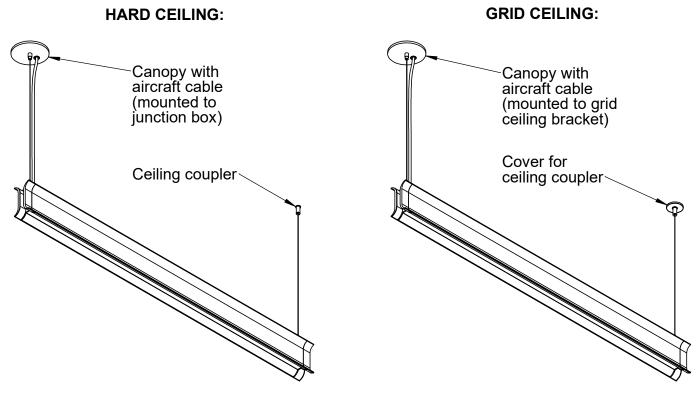


Fig. 1

MICRO FLARE™

FIXTURE NAME: MICRO FLARE - PENDANT

FIXTURE CODES: MFLR1P - MFLR2P
TYPE: CONTINUOUS [SLS2 / SLS3 / SLS4]

PAGE 2 OF 3

FIXTURE COMES PARTIALLY ASSEMBLED.




Ensure electrical circuit is disconnected before installation




Luminaires must be installed in accordance with national electrical code and local regulation.

Continuous installation:

- 10: Begin with the start fixture segment that has a power drop [code: SLS2] (see Fig. 2).
- 11: Refer to "Aircraft Cable Suspension" installation instruction sheet and make all appropriate ceiling and wiring connections.
- 12: Suspend and level the fixture. DO NOT trim excess aircraft cable until the entire fixture installation is complete.
- 13: Losen set screws and slide suspension plate away from the end of the fixture (see Fig. 3).
- 14: Suspend the middle / end [SLS3 / SLS4] fixture segment and connect it to the previous segment by sliding them together (see Fig. 2).
- 15: Lift the uplight module or cover plate from the new fixture segment; either middle [SLS3] or end [SLS4], to have better access to the inside components (see Fig. 4).
- 16: Open the latch mechanism on the middle / end segment [SLS3 / SLS4] and attach it to the hook on the previous segment. Push down the latch to pull the fixtures together (see Fig. 5).
- 17: Connect the electrical connectors at junction between sections.

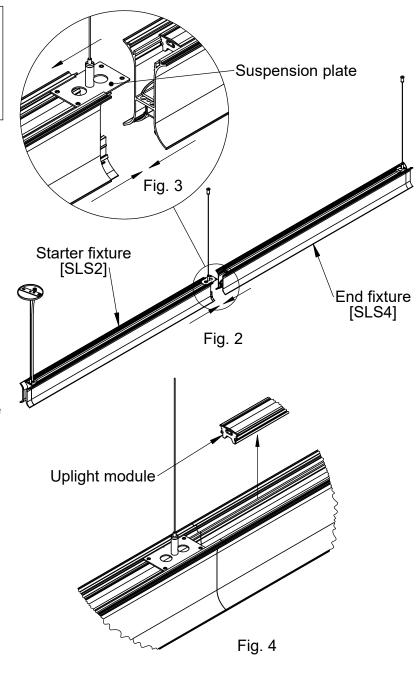

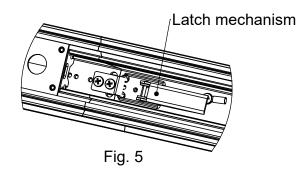

MICRO FLARE™

FIXTURE NAME: MICRO FLARE - PENDANT

FIXTURE CODES: MFLR1P - MFLR2P
TYPE: CONTINUOUS [SLS2 / SLS3 / SLS4]

PAGE 3 OF 3

FIXTURE COMES PARTIALLY ASSEMBLED.



Ensure electrical circuit is disconnected before installation.



Luminaires must be installed in accordance with national electrical code and local regulation.

Continuous installation:

18: Re-install the uplight module or top cover removed in step 15. Slide the suspension plate so it's centered between the joining fixture sections and tighten all set screws to secure in place (see Fig. 6).

19: Repeat steps 13-18 until entire fixture has been installed.

