


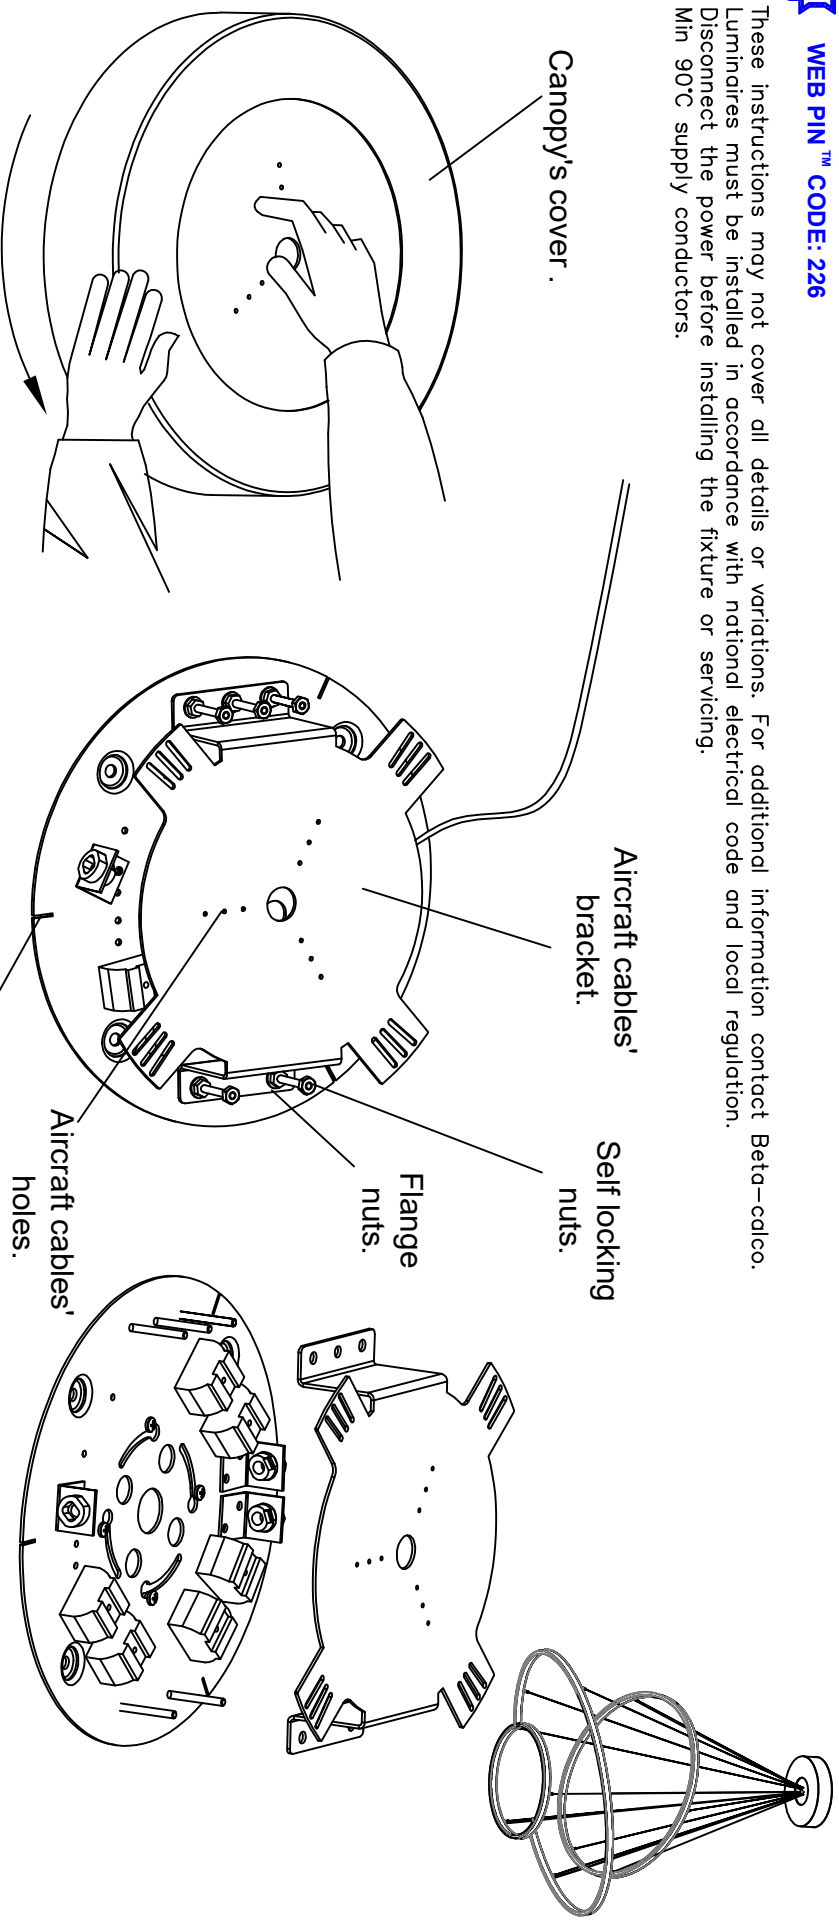

WEB PIN™ CODE: 226

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

**Step 1**

Place the canopy a flat surface , hold the center in place and twist the cover counterclockwise .

Step 2

Remove the cover .
Note that the aircraft cables holes are aligned with the ceiling plate cut out .

Step 3

Unfasten the self locking nuts and the flange nuts and remove the aircraft cables' bracket .

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS

FIXTURE DESCRIPTION: MICRO RING 3D PENDANT

IMPORTANT NOTE FOR FIXTURES WITH LED:
- DO NOT TOUCH THE LED.

BETA-CALCO INC. 25 Kodlak Crescent, TORONTO ONTARIO CANADA M3J 3E5




- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

Cut out

Dimples holes

Safety screws

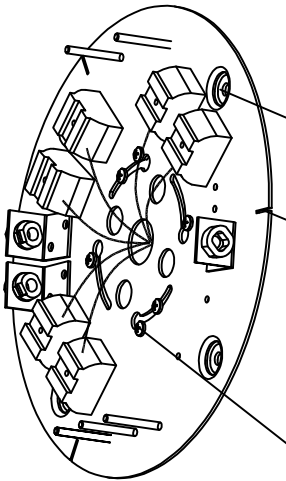

Step 4

Attach the canopy to the ceiling.

and make the LED DC wiring connections from the remote drivers' boxes to the terminal blocks on the ceiling plate following the provided wiring diagram. Please see the remote distance table.

Note:

- The cut out position will be later on aligned with the aircraft cables.
- According to the total weight, the fixture can be attached directly to a standard junction box or by using the additional 4x dimples holes screws (by others) according to the ceiling material. Please see the weights table.
- If necessary remove and reinstall the safety screws after the ceiling plate is attached to the ceiling

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS

FIXTURE DESCRIPTION: MICRO RING 3D PENDANT



BETA-CALCO INC. 25 Kodlak Crescent, TORONTO ONTARIO CANADA M3J 3E5

| Wire size | 18 AWG | 16 AWG | 14 AWG |
|----------------------|--------|--------|--------|
| Max. remote distance | 40ft | 60ft | 90ft |

***MAX DRIVER BOX REMOTE DISTANCE FROM THE BODY OF THE FIXTURE**

Weights table. Add all the rings weighs which are part of the fixture to obtain the total weight.

| Ring size | Weight |
|-----------|--------------|
| 24"610mm | 5.3lb"/2.4kg |
| 26"660mm | 5.8lb"/2.6kg |
| 36"914mm | 8.0lb"/3.6kg |
| 48"1219mm | 11lb"/4.8kg |
| 60"1524mm | 14lb"/6.0kg |
| 72"1829mm | 16lb"/7.2kg |
| 84"2134mm | 19lb"/8.3kg |

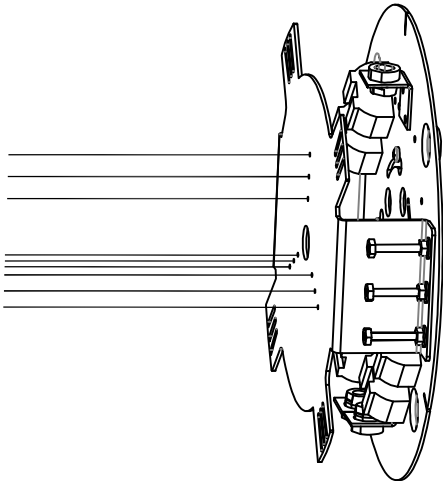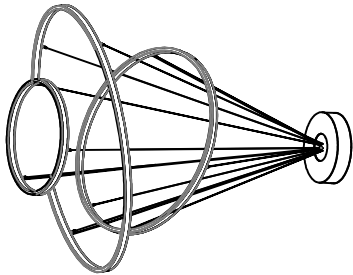

Step 5

Pass the aircraft cables through the suspension bracket hole and attach the bracket to the ceiling plate using the flange and the self locking nuts removed at Step 3.

Fasten the self locking nuts just by hand until they stop.


IMPORTANT NOTE FOR FIXTURES WITH LED:

- DO NOT TOUCH THE LED.



WEB PIN™ CODE: 226

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

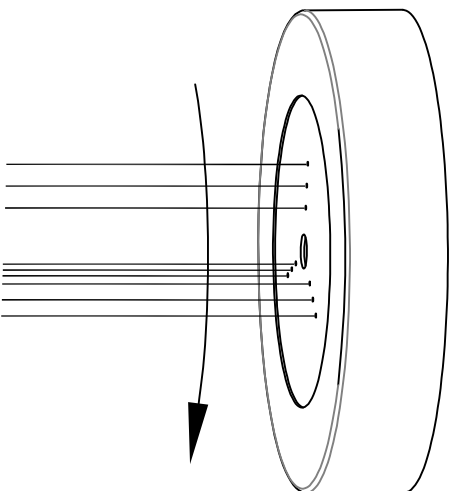

Step 6

Pass the aircraft cables through the canopy, lift the canopy and twist to lock until it stops.

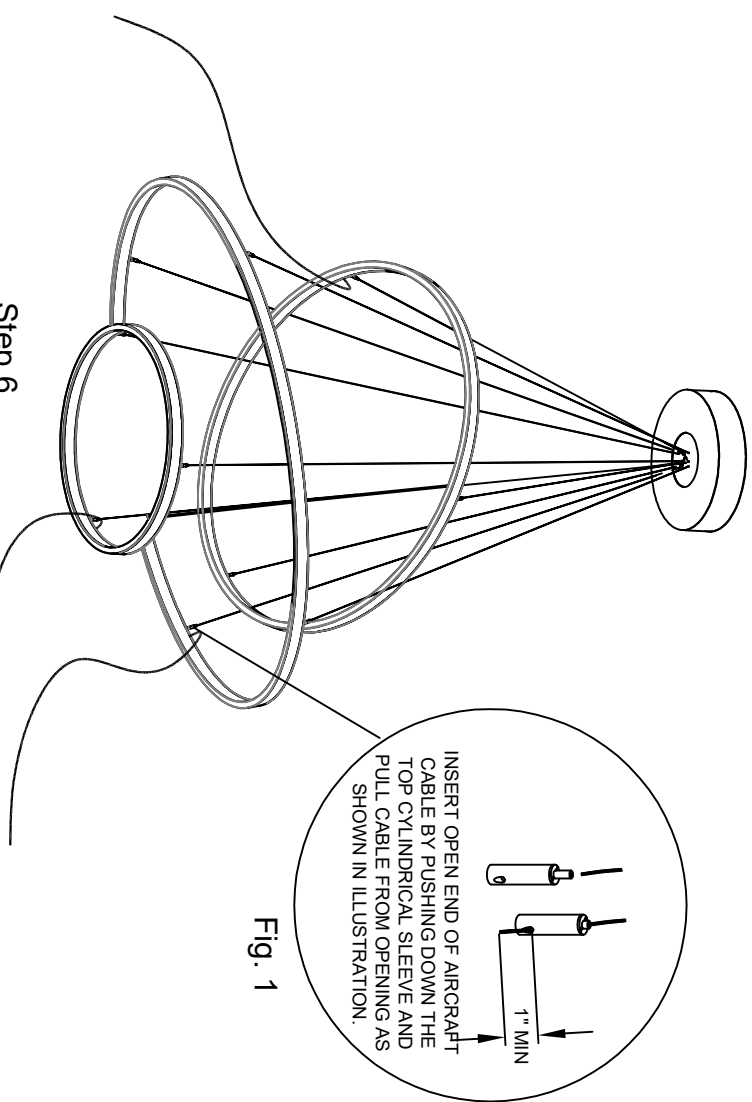


Fig. 1

Step 6

Attach the aircraft cables to the fixtures (Fig.1)
Start with the aircraft cables closer to the center of the canopy and the smallest ring size.

Tilt the rings as desired.

It is recommended that the power cord exit from the ring to be close to the highest side of the ring closest to the canopy.

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS

FIXTURE DESCRIPTION: MICRO RING 3D PENDANT



BETA-CALCO INC. 25 Kodlak Crescent, TORONTO ONTARIO CANADA M3J 3E5

IMPORTANT NOTE FOR FIXTURES WITH LED:
- DO NOT TOUCH THE LED.




WEB PIN™ CODE: 226

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

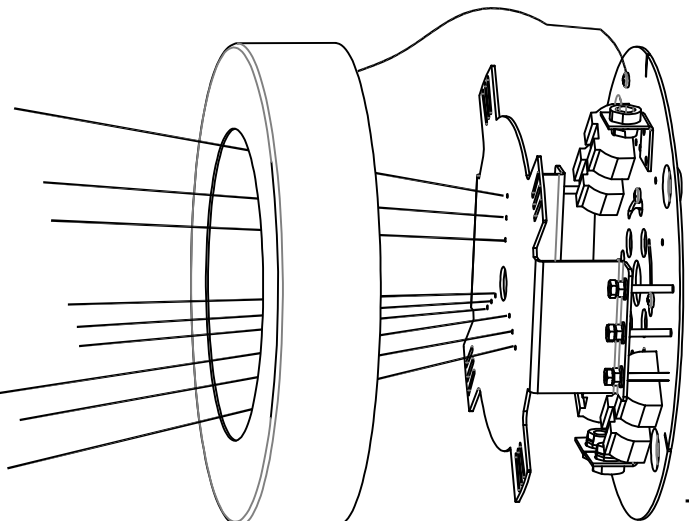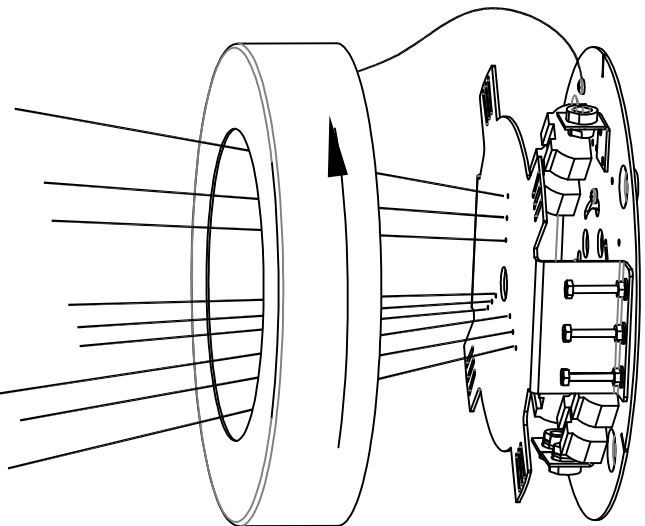

Strain relief
Power cord

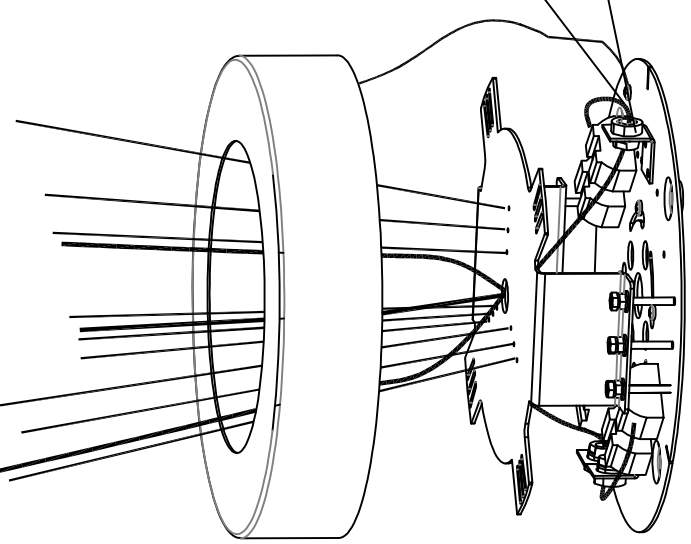

Step 7
Twist to unlock and drop the canopy.

Step 8
Unfasten the flange nuts by 0.75 " and drop the suspension bracket.

Step 9
Pass the power cords through the canopy then through the center hole of the suspensic bracket and secure them in place to the ceiling plate brackets with the strain relieves provide Make all the necessary wiring connections to the terminal blocks on the ceiling plate as per wiring diagram and labels.

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/AUX GLASS DECORATIVE COMPONENTS





FIGURE DESCRIPTION: MICRO RING 3D PENDANT

IMPORTANT NOTE FOR FIXTURES WITH LED:
- DO NOT TOUCH THE LED.

BETA-CALCO INC. 25 Kodlak Crescent, TORONTO ONTARIO CANADA M3J 3E5

WEB PIN™ CODE: 226

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

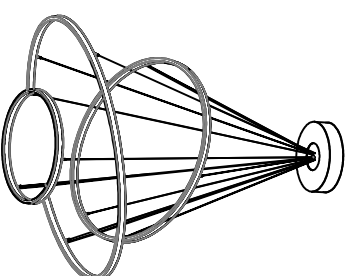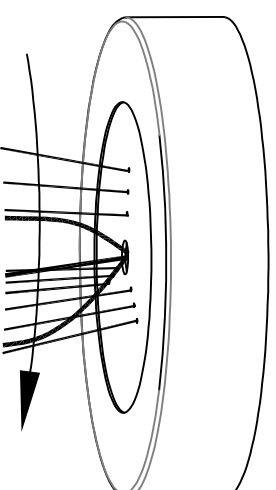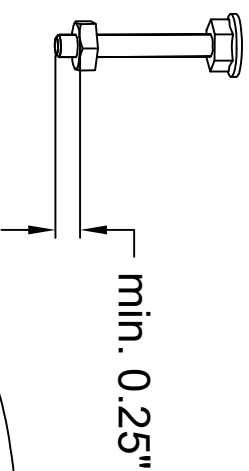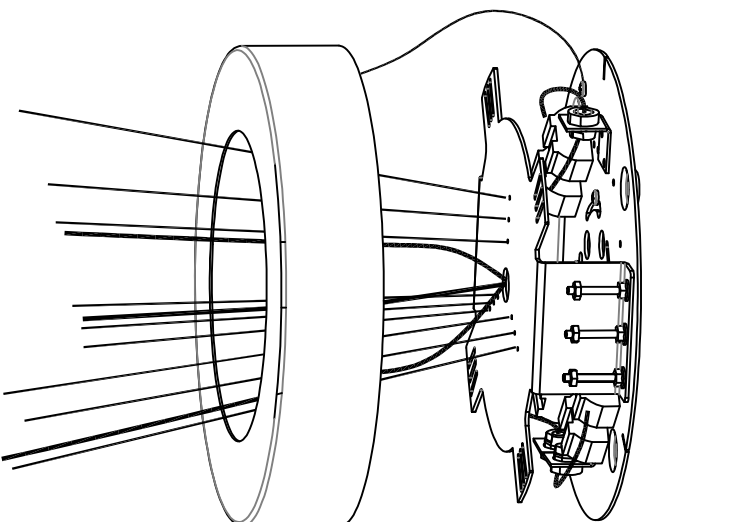

Step 10

Fasten the flange nuts and the fasten the self locking nuts until they pass the end of the stud by min. 0.25 " .

Step 11

Lift the canopy and twist to lock until it stops .

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS

FIXTURE DESCRIPTION: MICRO RING 3D PENDANT

BETA-CALCO INC. 25 Kodlak Crescent, TORONTO ONTARIO CANADA M3J 3E5

IMPORTANT NOTE FOR FIXTURES WITH LED:
- DO NOT TOUCH THE LED.