


 **WEB PIN™ CODE: 137**

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

**INSTALLATION INSTRUCTIONS
FOR TYPE "S1" MOUNTING**

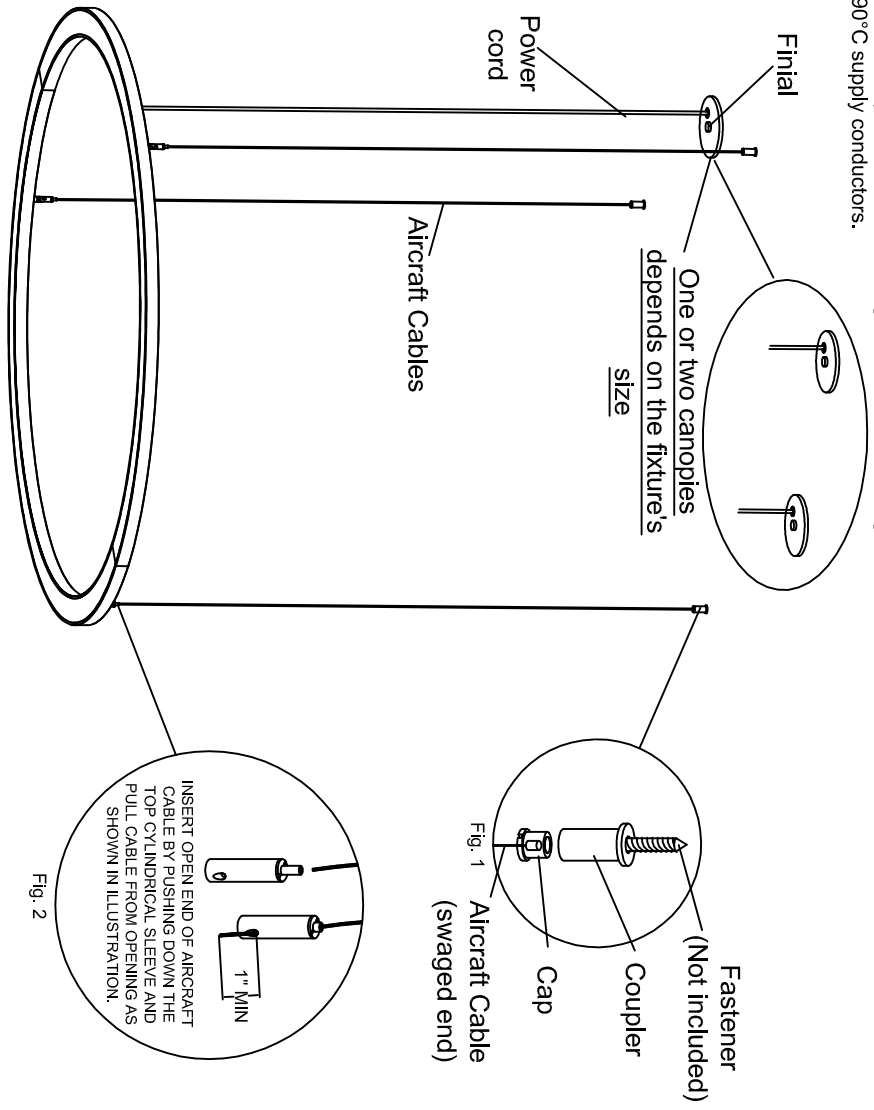

1. Mount the couplers to the ceiling using appropriate fasteners -NOT INCLUDED- according to the structure of the ceiling - see Fig.1
2. Pass the aircraft cables through the caps - see Fig.1
3. Fasten the caps to the couplers
4. Lift the fixture and attach the loose ends of the Aircraft Cables to the cable gliders -see Fig.1
5. Make all necessary wiring connections and attach the canopy to the junction box using the bracket/nipple/finial assembly provided.
6. Level the fixture using the cable gliders. To release the grip lock, press down on the tip of the mechanism. If desired, clip the excess aircraft cables after the fixture is level.

Note: The canopy is used to cover the branch circuit/junction box.

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS

FIGURE DESCRIPTION: MICRO RING DE PENDANT

BETA-CALCO INC. 25 Kodlak Crescent, TORONTO ONTARIO CANADA M3J 3E5


SIZE (in)	SUSPENSION POINTS	REMOTE BOXES
26	3	1
36	3	1
48	3	1
60	3	1
72	4	1
84	4	1
96	6	2
144	8	2

**IMPORTANT NOTE FOR
FIXTURES WITH LED:
- DO NOT TOUCH THE
LED.**



- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

INSTALLATION INSTRUCTIONS FOR TYPE "S1" MOUNTING

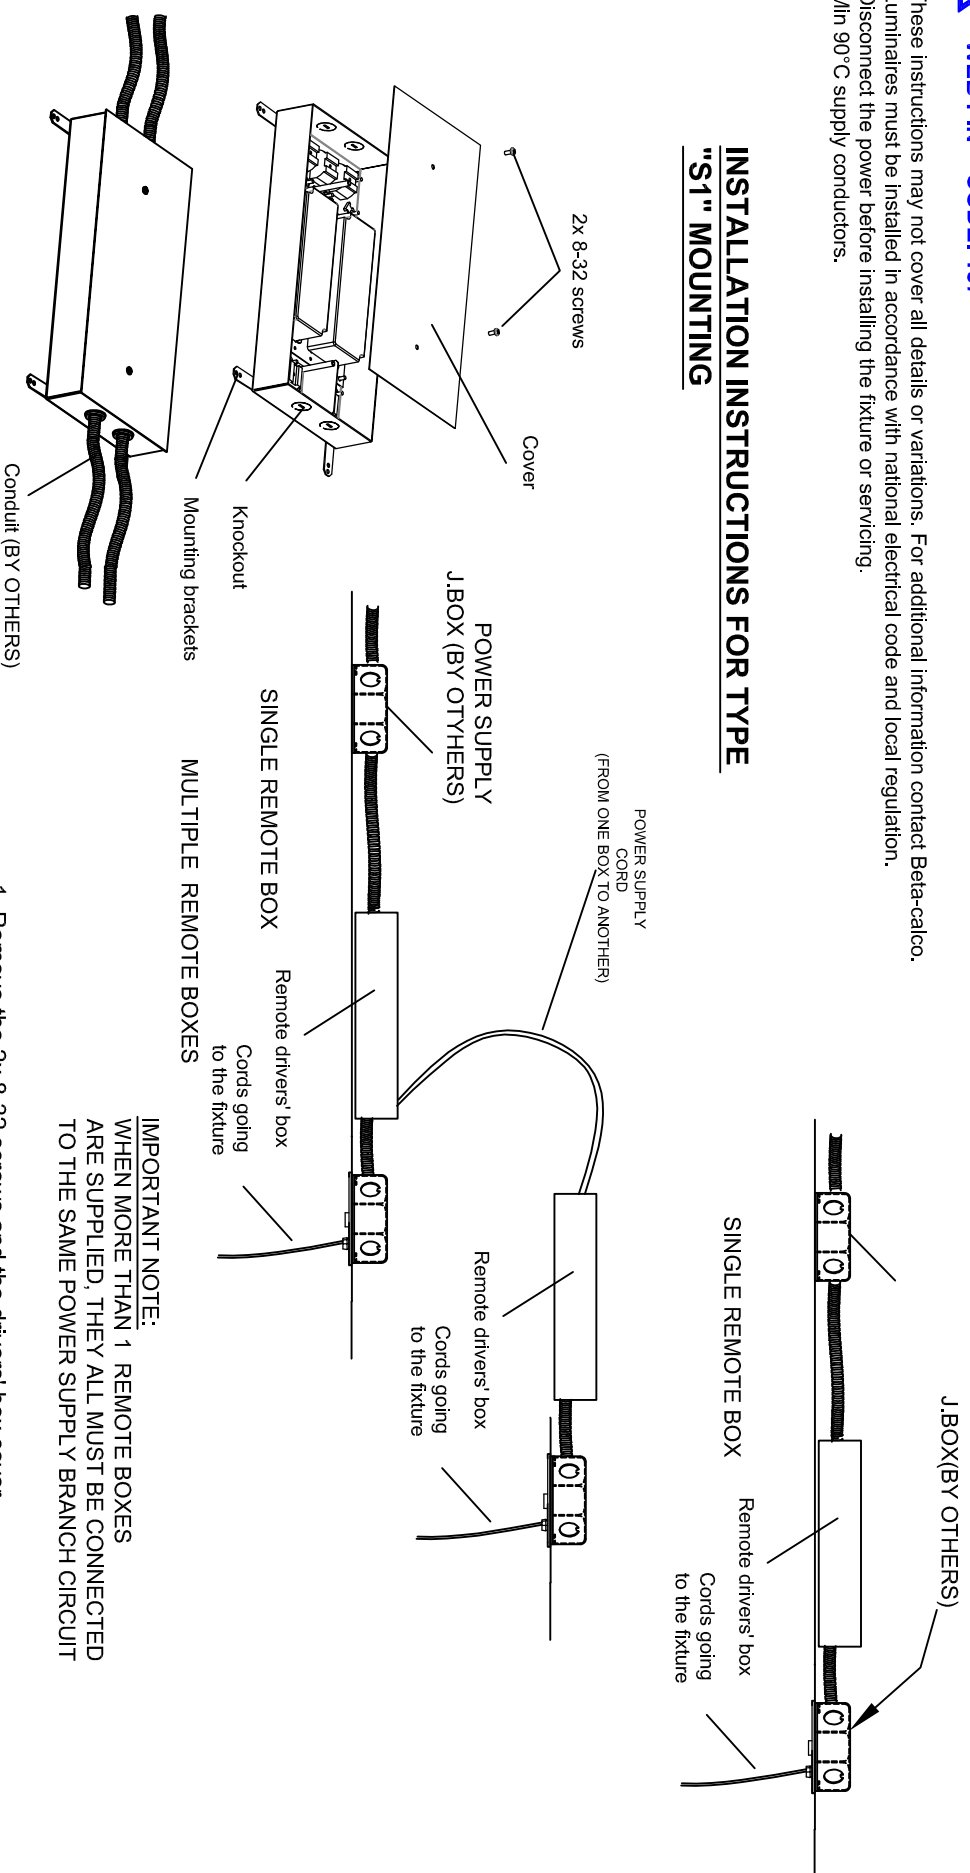

1. Remove the 2x 8-32 screws and the drivers' box cover.
2. Remove the necessary Knockouts.
3. Attach the conduits (not provided).
4. Make the wiring connections.
5. Install the cover using the previously removed screws. Use the mounting brackets to secure the box in place.

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS


FIXTURE DESCRIPTION: MICRO RING DE PENDANT

BETA-CALCO INC. 25 Kodiak Crescent, TORONTO ONTARIO CANADA M3J 3E5




- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

INSTALLATION INSTRUCTIONS **FOR FIXTURE MADE WITH** **SECTIONS**

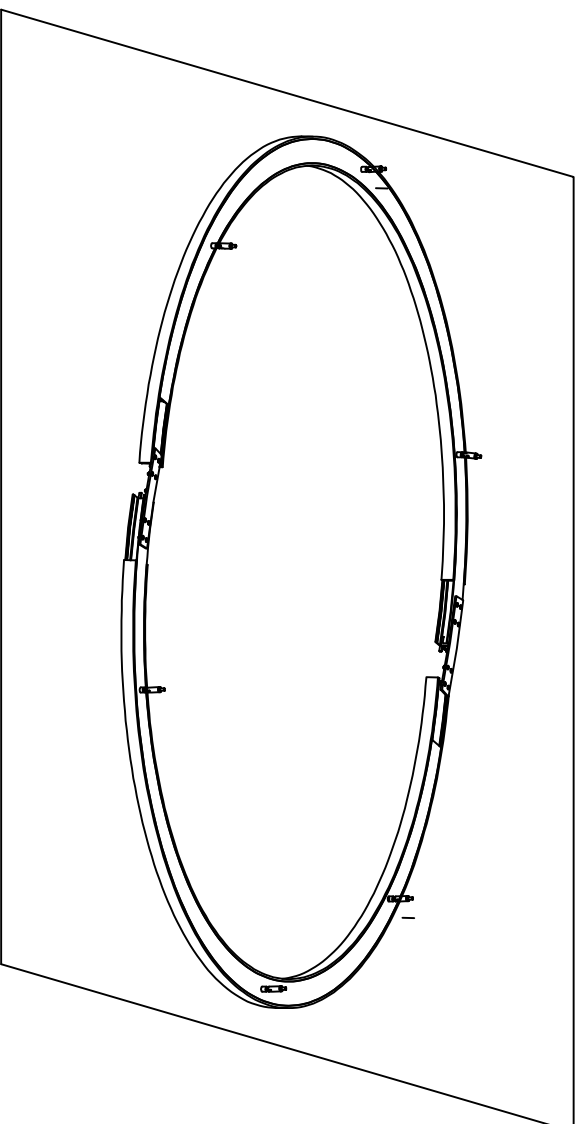

1. PLACE THE FIXTURE ON A FLAT SURFACE PREFERABLY HIP OR CHEST LEVEL

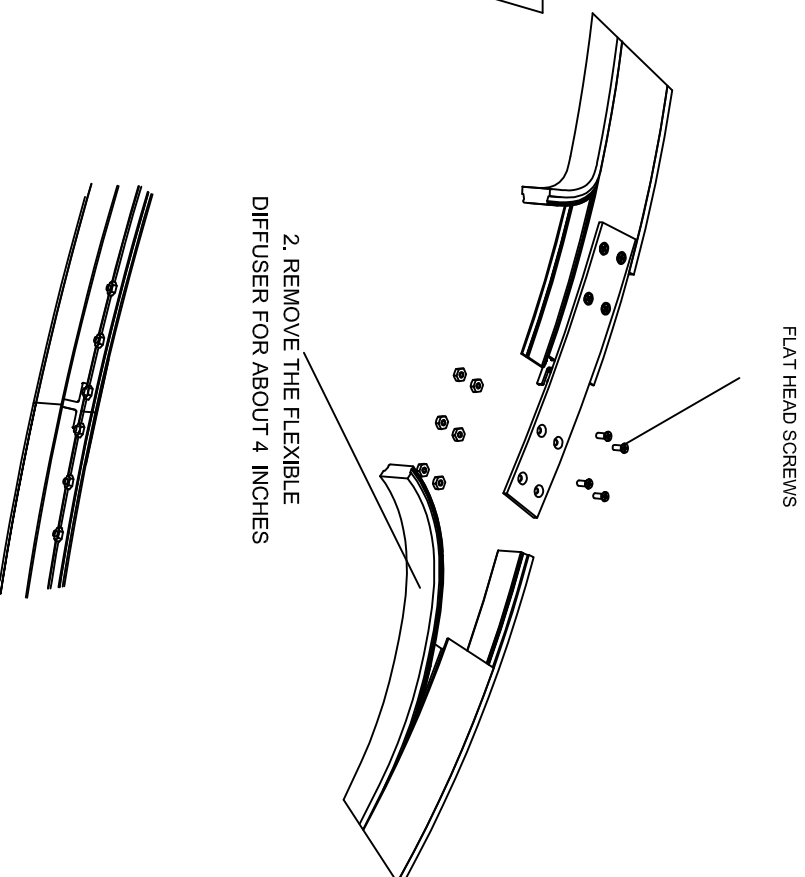

3. JOIN THE SECTIONS UNTIL THERE IS NO OR MINIMUM GAP POSSIBLE AND TIGHTEN THEM TOGETHER WITH 6-32 FLAT HEAD SCREWS AND NUTS

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS
FIXTURE DESCRIPTION: MICRO RING DE PENDANT


BETA-CALCO INC. 25 Kodiak Crescent, TORONTO ONTARIO CANADA M3J 3E5

IMPORTANT NOTE FOR
FIXTURES WITH LED:
- DO NOT TOUCH THE
LED.




- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

INSTALLATION INSTRUCTIONS **FOR FIXTURE MADE WITH** **SECTIONS**

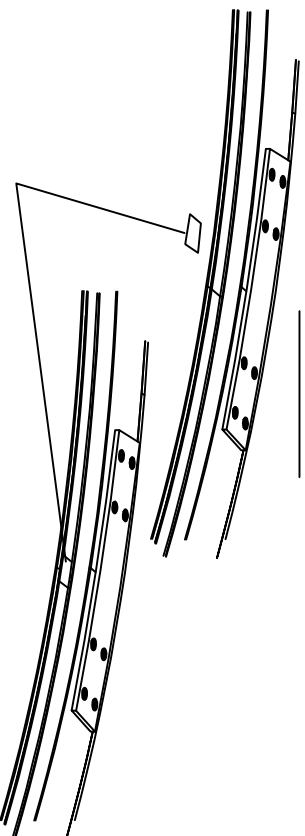

4. CUT SMALL PIECES
FROM ALUMINUM TAPE PROVIDED
AND APPLY THEM ON THE JOINING
LINE TO PREVENT ANY POSSIBLE LIGHT LEAK

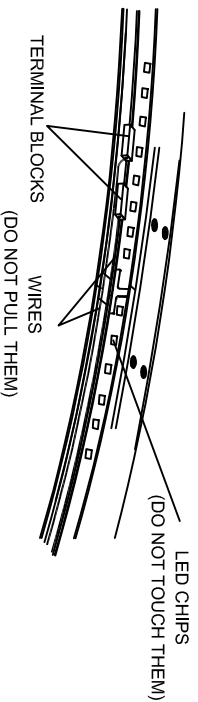


5. GENTLY MAKE THE WIRING CONNECTIONS (SNAP IN) IN BETWEEN THE
SECTIONS AND ATTACH THE SMALL TERMINAL BLOCKS
TO THE FIXTURE USING THE ONE ADHESIVE SIDE

NOTE:


FOR THE 144" RING SIZE NO ELECTRICAL CONNECTION IN BETWEEN
SECTIONS IS REQUIRED

**NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES
WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS**
FIXTURE DESCRIPTION: MICRO RING DE PENDANT

BETA-CALCO INC. 25 Kodiak Crescent, TORONTO ONTARIO CANADA M3J 3E5

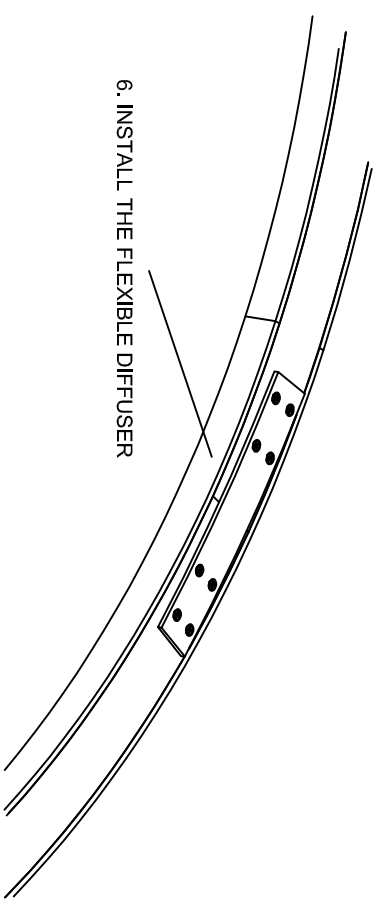

6. INSTALL THE FLEXIBLE DIFFUSER

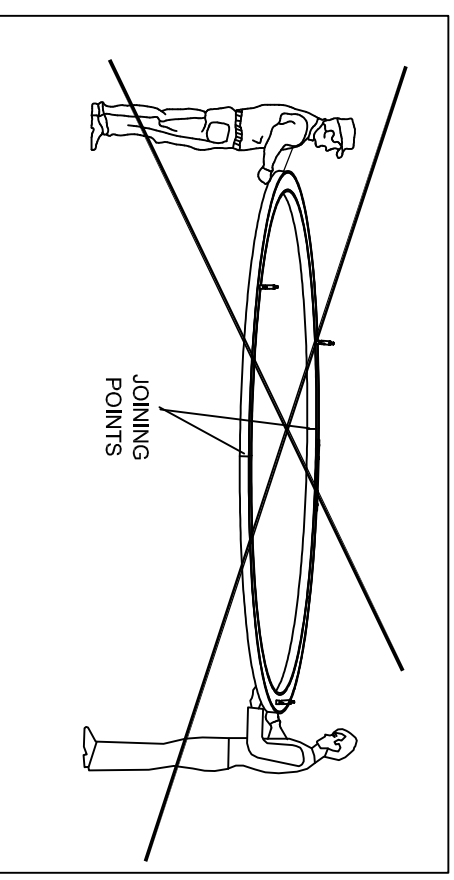

7. LIFT THE FIXTURE AND FOLLOW THE STEPS FROM PAGE 1
- MAKE SURE THAT THE FIXTURE IS FLAT AT ANY TIME.

**IMPORTANT NOTE FOR
FIXTURES WITH LED:
- DO NOT TOUCH THE
LED.**