




- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

INSTALLATION INSTRUCTIONS FOR TYPE "S2" MOUNTING

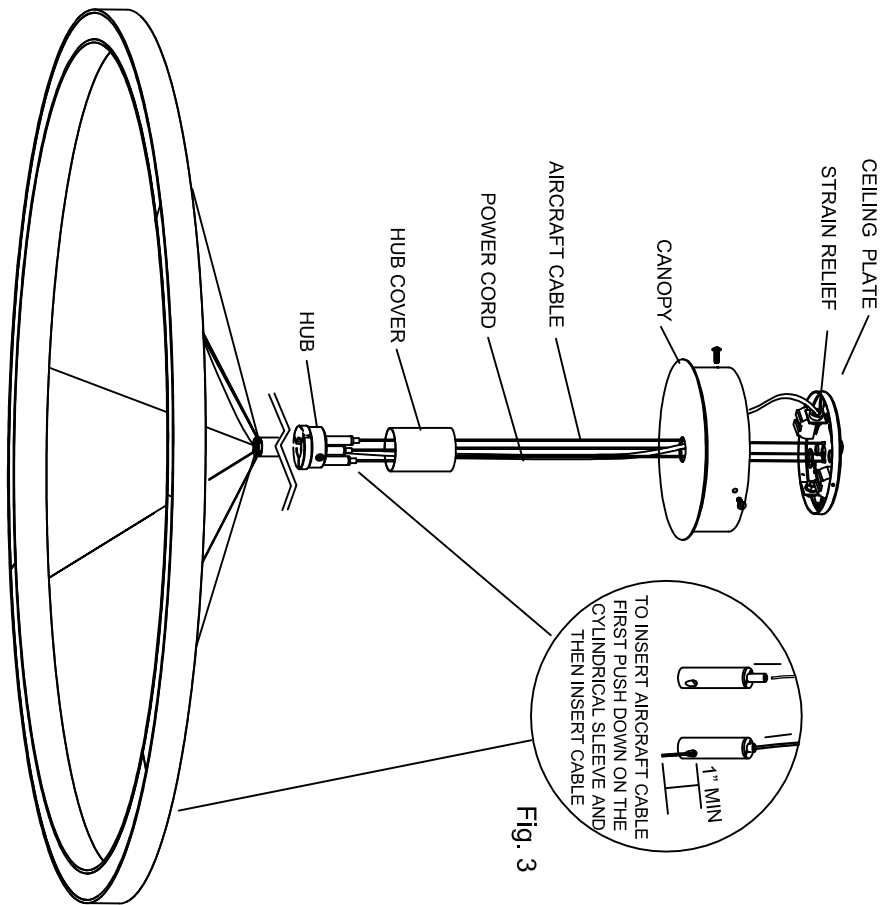

1. Place the fixture on a flat surface.
2. Attach the ceiling plate to the junction box and make the wiring connections coming from the remote box to the terminal blocks.
3. Lift the fixture and insert the long aircraft cables into the cable gliders on the hub (Fig. 3) as well as on the gliders on the ring. Ensure that the aircraft cables and power cords are passing through the canopy and hub cover.
4. Adjust height of the fixture, secure the power cord with the strain relief provided or use cables ties, and trim or coil inside the canopy the excess power cords.
5. Make all necessary electrical connections, lift canopy cover into position and secure with 3x screws.

SIZE (in)	REMOTE BOXES
36	1
48	1
60	2
72	2
84	2

NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS
FIXTURE DESCRIPTION: MICRO RING, MICRO RING DE, MICRO RING SE, MICRO RING II



BETA-CALCO INC. 25 Kodlak Crescent, TORONTO ONTARIO CANADA M3J 3E5




WEB PIN™ CODE: 137

- 1: These instructions may not cover all details or variations. For additional information contact Beta-calco.
- 2: Luminaires must be installed in accordance with national electrical code and local regulation.
- 3: Disconnect the power before installing the fixture or servicing.
- 4: Min 90°C supply conductors.

INSTALLATION INSTRUCTIONS FOR TYPE "S2" MOUNTING

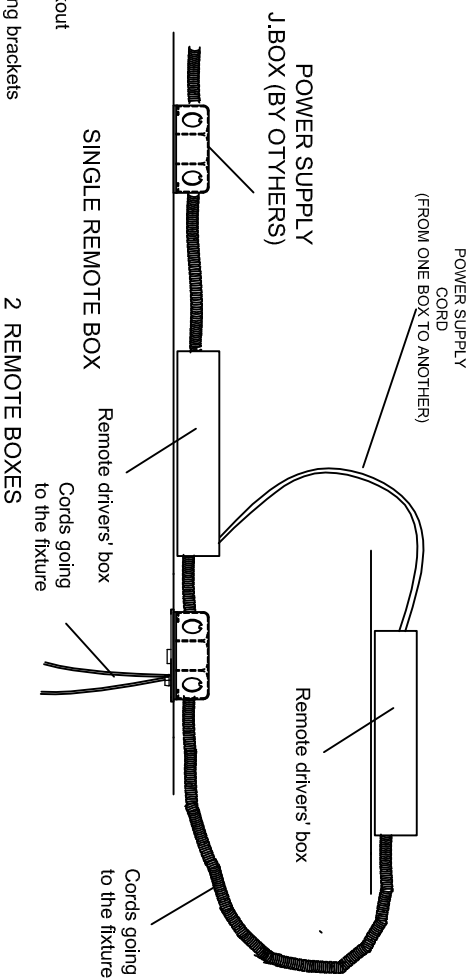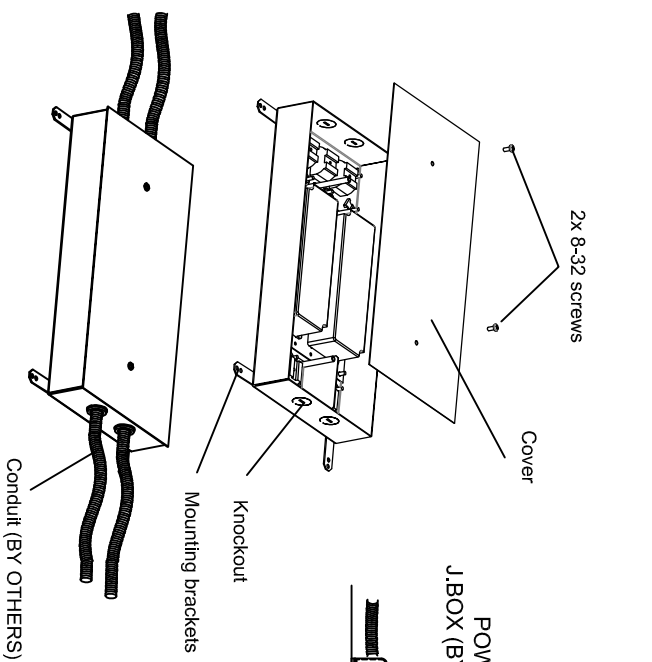

IMPORTANT NOTE:
WHEN MORE THAN 1 REMOTE BOXES
ARE SUPPLIED, THEY ALL MUST BE CONNECTED
TO THE SAME POWER SUPPLY BRANCH CIRCUIT

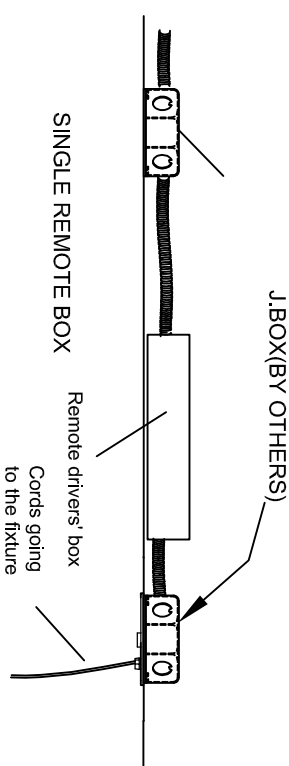

1. Remove the 2x 8-32 screws and the drivers' box cover.
 2. Remove the necessary Knockouts.
 3. Attach the conduits (not provided).
 4. Make the wiring connections.
 5. Install the cover using the previously removed screws.
- Use the mounting brackets to secure the box in place.

**NOTE: USE COTTON GLOVES WHEN INSTALLING OR HANDLING FIXTURES
WITH PLATED FINISH OR GLASS/FAUX GLASS DECORATIVE COMPONENTS**

FIGURE DESCRIPTION: MICRO RING DE PENDANT

BETA-CALCO INC. 25 Kodlak Crescent, TORONTO ONTARIO CANADA M3J 3E5