

Fixture comes partially assembled.



Ensure electrical circuit is disconnected before Installation.



Luminaires must be installed in accordance with National electrical code and local regulation.


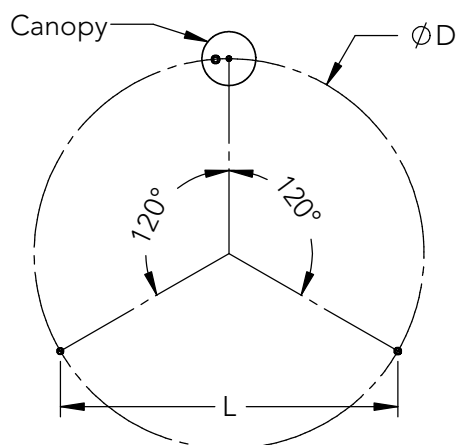


Fig. 1

SIZE	L	D
FELIX - 3'	29.84" (758mm)	34.45" (875mm)
FELIX - 4'	41.84" (1063mm)	48.31" (1227mm)
FELIX - 5'	52.84" (1342mm)	61.01" (1550mm)
FELIX - 6'	64.84" (1647mm)	74.87" (1902mm)
FELIX - 7'	76.84" (1952mm)	88.72" (2253mm)

Table 1

1. Follow the diagram and dimensions in Fig. 1 and Table 1 for the positioning of the mounting points on the ceiling.
2. Mount the couplers to the ceiling using appropriate fasteners (not included) ceiling (see Fig. 2).
3. Pass the aircraft cables through the caps (see Fig. 2).
4. Fasten the caps to the couplers.
5. Lift the fixture and attach the loose ends of the three aircraft cables to the cable gliders (see Fig. 3).
6. Make appropriate wiring connections and attach the canopy to the junction box using the bracket/nipple/finial assembly provided.
7. Level the fixture using the cable gliders. To release the grip lock, press down on the tip of the mechanism. If desired, clip the excess aircraft cables after the fixture is leveled.

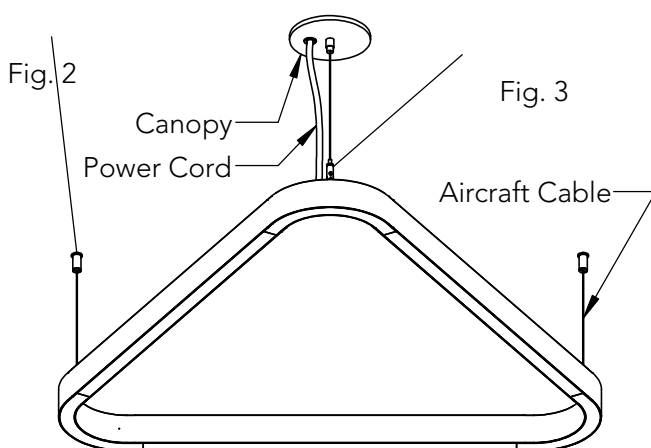



Fixture comes partially assembled.



Ensure electrical circuit is disconnected before Installation.



Luminaires must be installed in accordance with National electrical code and local regulation.

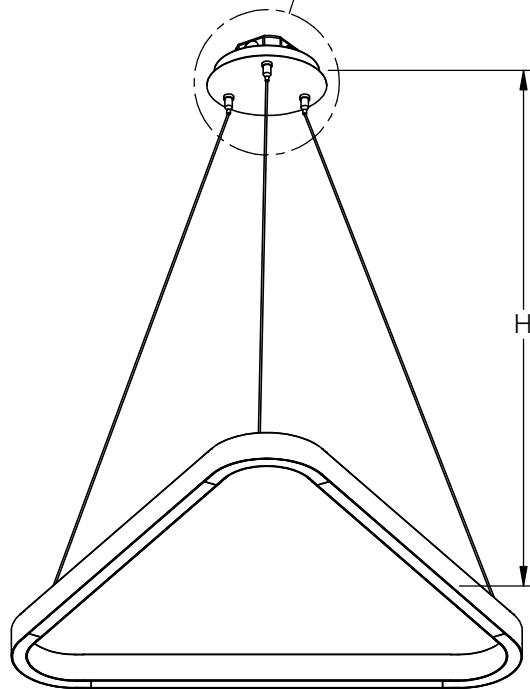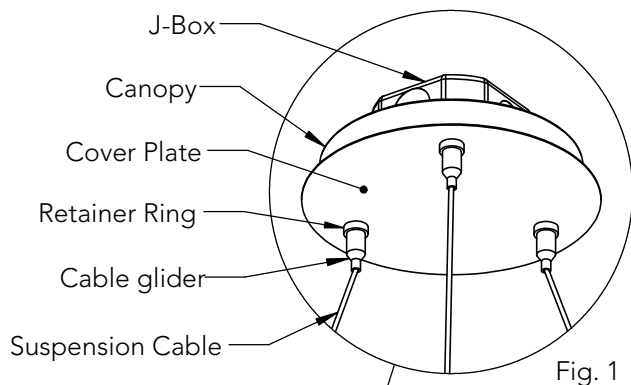

SIZE	MINIMUM HEIGHT	MAX HEIGHT
3ft	24"/610mm	78"/1981mm
4ft	24"/610mm	78"/1981mm
5ft	36"/914mm	78"/1981mm
6ft	36"/914mm	78"/1981mm
7ft	42"/1067mm	78"/1981mm

Table 1

1. Refer to the "Hub Remote POS Canopy and Suspension" installation instruction sheet.
2. Mount the canopy on to the junction box and ceiling using appropriate fasteners (not included) according to the structure (Fig. 1).
3. Feed each the suspension cable through one retainer ring and one hole on the canopy cover plate.
4. Lift the fixture and attach the loose ends of the three suspension cables to the cable gliders.
5. Adjust mounting height "H" (Fig. 2) following the guidelines in Table 1.
6. Make appropriate wiring connections and attach the canopy cover using the canopy retainer rings.
7. Level the fixture using the cable gliders. To release the grip lock, press down on the tip of the mechanism.

Fixture comes partially assembled.



Ensure electrical circuit is disconnected before Installation.



Luminaires must be installed in accordance with National electrical code and local regulation.

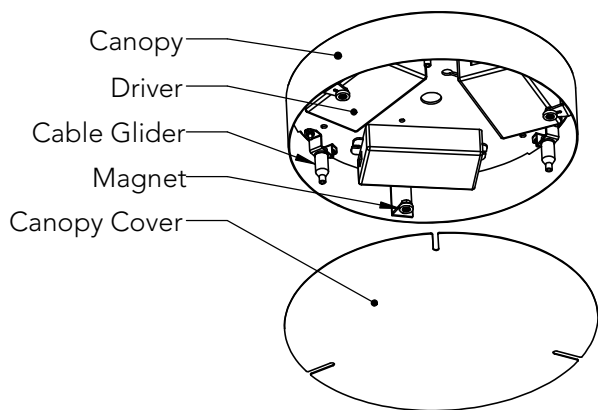


Fig. 1

SIZE	MINIMUM HEIGHT	MAX HEIGHT
3ft	24" / 610mm	78" / 1981mm
4ft	24" / 610mm	78" / 1981mm
5ft	36" / 914mm	78" / 1981mm
6ft	36" / 914mm	78" / 1981mm
7ft	42" / 1067mm	78" / 1981mm

Table 1

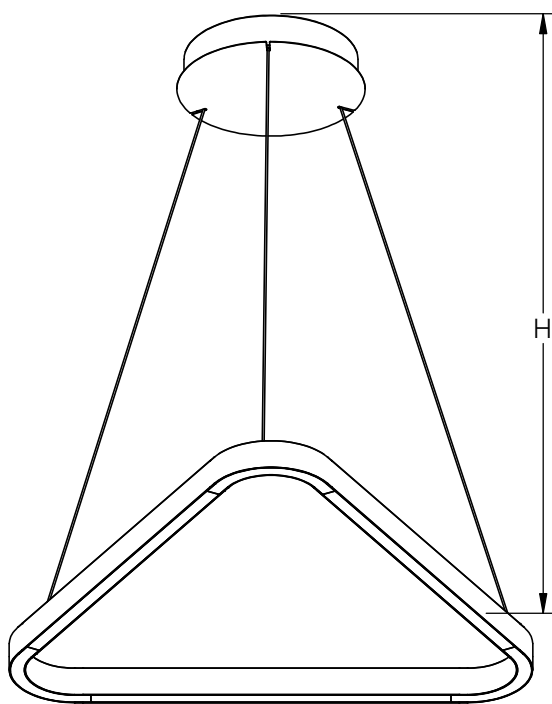


Fig. 2

1. Refer to the "Hub Integral POS Canopy and Suspension" installation instruction sheet.
2. Mount the canopy on to the junction box and ceiling using appropriate fasteners (not included) according to the structure (Fig. 1).
3. Lift the fixture and attach the loose ends of the three suspension cables to the cable gliders.
4. Adjust mounting height "H" (Fig. 2) following the guidelines in Table 1.
5. Level the fixture using the cable gliders. To release the grip lock, press down on the tip of the mechanism.
6. Make appropriate wiring connections and attach the canopy cover using the magnets inside the canopy.

Fixture comes partially assembled.



Ensure electrical circuit is disconnected before Installation.



Luminaires must be installed in accordance with National electrical code and local regulation.

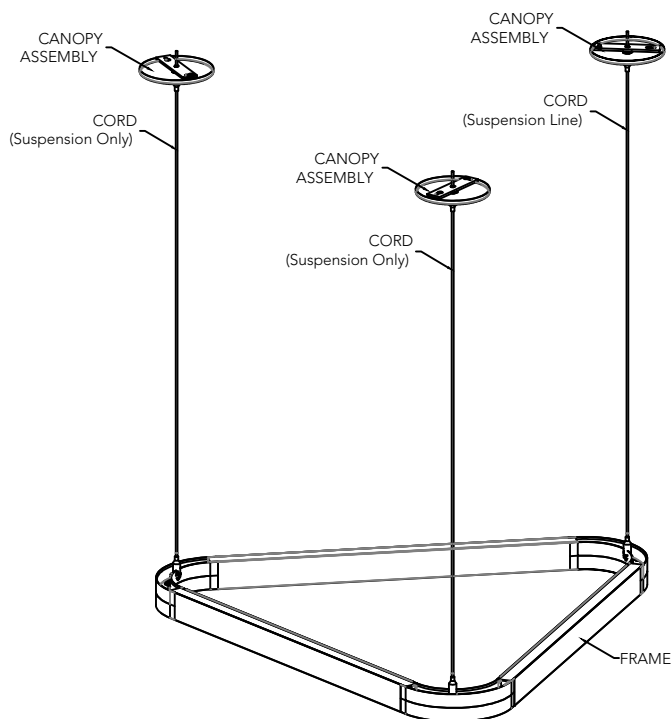


FIGURE 1


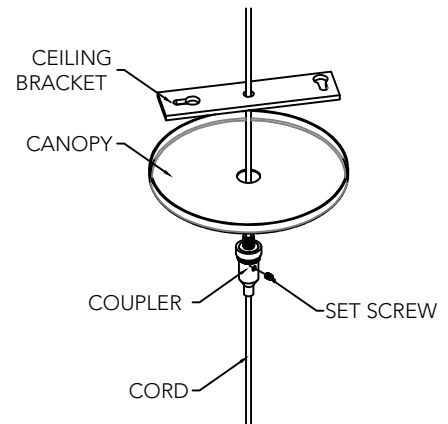


FIGURE 2

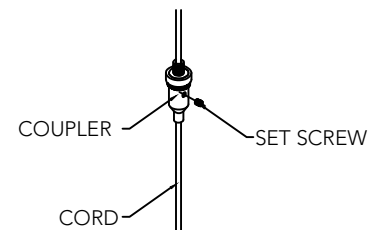

INSERT OPEN END OF CORD
BY PUSHING DOWN THE
BOTTOM CYLINDRICAL SLEEVE AND
PULL CORD FROM OPENING AS
SHOWN IN ILLUSTRATION

FIGURE 3

1. Remove the ceiling brackets and mount it to the ceiling using appropriate fasteners "NOT INCLUDED" according to the structure of the ceiling - see Figure 2
2. Loosen the set screw, insert the loose end of cord to the coupler then follow by canopy - see FIGURE 3
3. Lift the fixture and make all the necessary wiring connections (suspension line) and cover the junction box with canopy and secure it with the coupler
4. Level the fixture using the couplers - to release the grip lock, press down on the tip of the mechanism (if desired, clip or cut the excess cord after the fixture is level)
5. Tighten the set screw to hold the cord in place

NOTE: The canopy is used to cover the branch circuit / junction box

Fixture comes partially assembled.




Ensure electrical circuit is disconnected before Installation.




Luminaires must be installed in accordance with National electrical code and local regulation.

1. Remove the 2x 8-32 screws and the drivers' box cover
2. Remove the necessary knockouts
3. Attach the conduits "NOT SUPPLIED"
4. Make the wiring connections
5. Re-attach the cover and secure it with the supplied screws

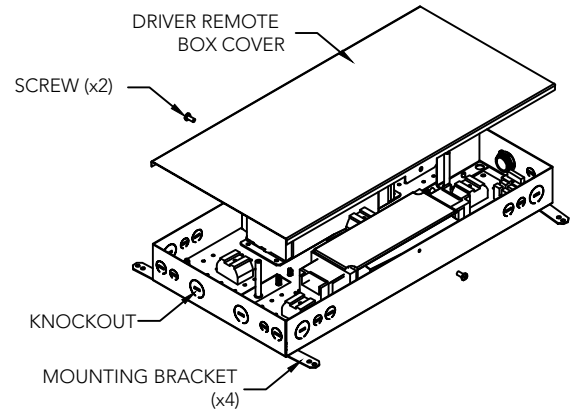


Use the mounting brackets to secure the box in place to the structure of the ceiling (MOUNTING SCREWS BY OTHERS)

SINGLE REMOTE BOX

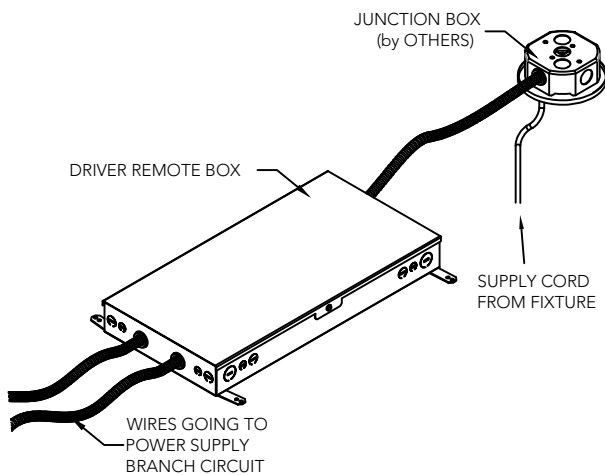

MULTIPLE REMOTE BOXES

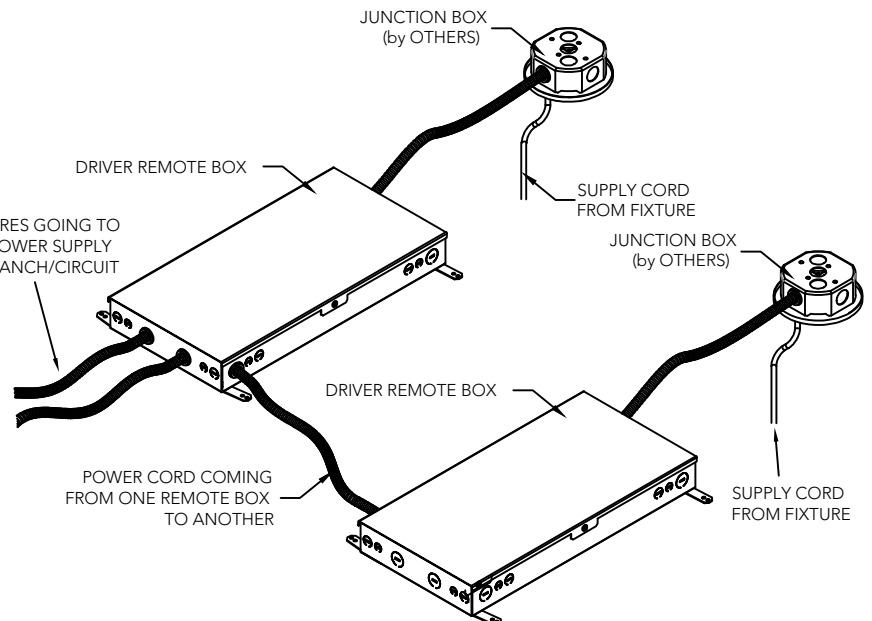

IMPORTANT NOTE:

1. When more than one remote box is supplied, they all must be connected to the same power supply branch circuit
2. Remote boxes should be accessible after installation